



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

LANCIA

MOD.

K COUPE'

YEAR

97 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the right of the bulkhead that divides the engine compartment from the compartment of the windshield-wiper motors. Run the cables through the available rubber plug under the brake fluid reservoir, on the right of the bulkhead. You will find routing easier, if you help it's progress from inside the cabin, behind the fuse box.

CENTRAL UNIT POSITION

Position the modular systems and the modules on the left-hand side under the dashboard on the driver's side.

POWER SUPPLY

Connect to the 3 mm² RED wire of the white multiway connector located under the fuse box.

IGNITION WIRE

Connect to the 1 mm² BLUE wire located in the brown multiway connector, down, at the rear of the fuse box.

DIRECTION INDICATORS

Connect to the 1 mm² LIGHT BLUE/BLACK and LIGHT BLUE/WHITE wire in a loose 5 way black connector located down at the rear of the fuse box.

ELECTRIC WINDOWS

Positive control signal

Driver's window:

Cut the 1,5 mm² GREY/RED wire.

Passenger's window:

Cut the 1,5 mm² BLUE/RED wire.

These wires are in the wiring harness coming out of the connector of the window roll-up unit located in the central area, under the dashboard.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the 1 mm² WHITE (unlock) and LIGHT BLUE (lock) wires in the multiway white connector located down, at the rear of the fuse box.

IMMOBILISATION POINT

Cut the 1,5 mm² RED wire in the wiring harness from the red relay in the central area of the engine compartment, on the bulkhead of the windshield-wipers motors compartment.

STARTER

+ 50: Cut the 2 mm² LIGHT BLUE wire in the wiring harness that comes out of the ignition switch connector.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.

DOORS SWITCH

Connect to the 1 mm² WHITE and WHITE/PINK wire in the 3 way white connector located down, at the rear of the fuse box.

BOOT SWITCH

Connect to the 1 mm² WHITE/VIOLET wire located in the same connector mentioned above.