



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

LANCIA

MOD.

LYBRA *

YEAR.

02 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the left, in the engine compartment.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the left side of the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 4 mm² RED wire located at the entrance of the fuse box.
- 31: connect with a ring terminal directly to the car body.

IGNITION WIRE

+ 15/54: connect to the BLUE wire at the position nr.7 of the 19 way white connector.

DIRECTION INDICATORS

Connect to the PINK/WHITE wire, in the 14 way connector, and to the PINK wire in the 12 way connector located in the front part of the fuse box.

ELECTRIC WINDOWS

Negative control signal

To obtain the windows closing it is necessary to connect to the BLUE/WHITE wire, at the position nr. 18, in the 18 way white connector, coming out of the multiservice central unit located under the sill cover, passenger's side, and extend the command to 24s.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art.3800	Vehicle	Position
GREY/BLACK	BLACK/VIOLET	pos.1 in the connector of radio receiver
YELLOW/BLACK	+30	in the fuse box
VIOLET	+30	in the fuse box
ORANGE	+30	in the fuse box
ORANGE/WHITE	+30	in the fuse box
VIOLET/WHITE	+30	in the fuse box

The connector, coming out of the original radio receiver, located in the front ceiling lamp group, may be of 12 or 16 way.

IMMOBILISATION POINT

Gasoil pump

Cut the ORANGE/WHITE wire coming out of the fuse nr. 2 of the superior fuse box, located under the dashboard, driver's side.

STARTER

+50: Cut the RED/BLACK wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate.

DOORS SWITCH

Connect to the BROWN/YELLOW wire located in the wiring harness of the yellow connector coming out of the ABI operating central.

BOOT SWITCH

Connect to the 0,5 mm² GREY/BLACK wire located in the wiring harness of the yellow connector coming out of the ABI operating central.