



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **LANCIA** MOD. **LYBRA \*** YEAR. **03** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the left, in the engine compartment.																							
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the left side of the dashboard, driver's side.																							
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 4 mm <sup>2</sup> RED wire located at the entrance of the fuse box. <b>-31:</b> connect with a ring terminal directly to the car body.																							
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the BLUE wire at the position nr.7 of the 19 way white connector.																							
<b>DIRECTION INDICATORS</b>	Connect to the PINK/WHITE wire, in the 14 way connector, and to the PINK wire in the 12 way connector located in the front part of the fuse box.																							
<b>ELECTRIC WINDOWS</b>	<b>Negative control signal</b> To obtain the windows closing it is necessary to connect to the BLUE/WHITE wire, at the position nr. 18, in the 18 way white connector, coming out of the multiservice central unit located under the sill cover, passenger's side, and extend the command to 24s.																							
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<b>Connections antitheft/vehicle</b> <table border="0" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Art. 3800</th> <th style="text-align: left;">Vehicle</th> <th style="text-align: left;">Position</th> </tr> </thead> <tbody> <tr> <td>GREY/BLACK</td> <td>BLACK/VIOLET</td> <td>pos.1 in the 12 way connector</td> </tr> <tr> <td>YELLOW/BLACK</td> <td>positive</td> <td>supply in the fuse box</td> </tr> <tr> <td>VIOLET</td> <td>GREY</td> <td>driver's side door exit</td> </tr> <tr> <td>ORANGE</td> <td>GREEN/YELLOW</td> <td>driver's side door exit</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>ground</td> <td>car body</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>positive</td> <td>supply in the fuse box</td> </tr> </tbody> </table>			Art. 3800	Vehicle	Position	GREY/BLACK	BLACK/VIOLET	pos.1 in the 12 way connector	YELLOW/BLACK	positive	supply in the fuse box	VIOLET	GREY	driver's side door exit	ORANGE	GREEN/YELLOW	driver's side door exit	ORANGE/WHITE	ground	car body	VIOLET/WHITE	positive	supply in the fuse box
Art. 3800	Vehicle	Position																						
GREY/BLACK	BLACK/VIOLET	pos.1 in the 12 way connector																						
YELLOW/BLACK	positive	supply in the fuse box																						
VIOLET	GREY	driver's side door exit																						
ORANGE	GREEN/YELLOW	driver's side door exit																						
ORANGE/WHITE	ground	car body																						
VIOLET/WHITE	positive	supply in the fuse box																						
<b>IMMOBILISATION POINT</b>	<b>Gasoil pump</b> Cut the ORANGE/WHITE wire coming out of the fuse nr. 2 of the superior fuse box, located under the dashboard, driver's side.																							
<b>STARTER</b>	<b>+50:</b> Cut the RED/BLACK wire located in the wiring harness coming out of the connector of the ignition key.																							
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate.																							
<b>DOORS SWITCH</b>	Connect to the BROWN/YELLOW wire located in the wiring harness of the yellow connector coming out of the ABI operating central placed in the lower part behind the passenger's side sill cover.																							
<b>BOOT SWITCH</b>	Connect to the 0,5 mm <sup>2</sup> GREY/BLACK wire located in the wiring harness of the yellow connector coming out of the ABI operating central placed in the lower part behind the passenger's side sill cover.																							