



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **LANCIA** MOD. **PHEDRA\*** YEAR. **02** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment along the coolant bowl. Pass the cables using the oval rubber core hitch above the right front shock absorber, behind the covering. It is suggested to take down the passenger's side glove compartment.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the left side of the dashboard, driver's side.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 6 mm <sup>2</sup> WHITE wire located in the 2 way connector coming out of the BSI central. <b>-31:</b> connect to the original ground terminal located behind the driver's side left lateral bulkhead.
<b>WAY CONNECTOR</b>	<b>+15/54:</b> connect to the 1,5 mm <sup>2</sup> YELLOW wire, at the position nr. 6, in the wiring harness coming out of the 16 way grey connector, in the fuse box.
<b>DIRECTION INDICATORS</b>	Connect to the WHITE wire at the position nr. 13, and to the BROWN wire at the position nr. 14, located in the 16 way black connector, in the fuse box.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> To obtain the windows closing it is necessary to intervene directly in the wiring harness coming out of each motor, inside to each door.
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<b>Connections antitheft/vehicle</b> Refer to the <b>fitting diagram nr.180.</b>
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the ORANGE wire, at the position nr. 16, of the 16 way black connector located in the fuses holder box, on the right, in the engine compartment.
<b>STARTER</b>	<b>+50:</b> Cut the 1,5 mm <sup>2</sup> WHITE wire located in the connector coming out of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate, near the bonnet bumper rubber.
<b>DOORS SWITCH</b>	Connect to the BROWN wire, at the position nr. 32, coming out of the 40 way white covering connector, in the BSI central. <b>Note: it is a control with positive polarity.</b>
<b>BOOT SWITCH</b>	Connect to the LIGHT BLUE wire, at the position nr.16, located in the wiring harness coming out of the 40 way grey connector, in the BSI central.

**FITTING DIAGRAM NR.180**

