



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **LANCIA** MOD. **THESIS*** YEAR. **02** PETROL DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens inside the wheelhouse, driver's side. Pass the cables using the original rubber sleeve located inside the driver's side wheelhouse.
- CENTRAL UNIT POSITION** Position the modular systems and the modules under the left side of the dashboard, driver's side.
- POWER SUPPLY** **+30:** connect to the 4 mm² RED wire located in the wiring harness coming out of the 2 way black connector, in the fuse box.
- 31: connect with a cable terminal directly to the ground terminal located behind the driver's side sill cover.
- IGNITION WIRE** **+15/54:** connect to the 1,5 mm² ORANGE wire located in the wiring harness, on the side of the fuse box coming out of the ignition key.
- DIRECTION INDICATORS** Connect to the wires: PINK at the position nr.3 (post. left), PINK/WHITE at the position nr.12 (post. right) located in the wiring harness coming out of the 40 way black connector, in the fuse box; BROWN/BLACK at the position nr.38 (ant. Left), BROWN/VIOLET at the position nr.39 (ant. Right) located in the wiring harness coming out of the 40 way light blue connector, in the fuse box. It is suggested to separate the lines with 1N5406 diodes.
Note: with the above mentioned connections it is possible to actuate the anterior and posterior direction indicators. There are no lateral direction indicators connections as the same do not need to be connected.
- ELECTRIC WINDOWS** Information not available at the moment.
- ACTIVAT./DEACTIVATION CONTROLS**
- | Art. 3800 | Vehicle | Position |
|--------------|---------------------------|---|
| GREY/BLACK | GREY/GREEN pin 16 | 32 way black conn. in the fuse box |
| YELLOW/BLACK | YELLOW/GREEN pin18 | 32 way black conn. in the fuse box |
| VIOLET | BROWN/YELLOW pin 22 (blk) | 40 way light blue conn. in the fuse box car |
| ORANGE | ground | body |
| VIOLET/WHITE | ground | car body |
| ORANGE/WHITE | ground | car body |
- Refer to the '**A diagram**' in the dedicated installations manual, inside the kit of the antitheft.
- IMMOBILISATION POINT** **Fuel pump**
Cut the BROWN wire located in the wiring harness coming out of the inertial switch placed under the driver's side seat.
- STARTER** **+50:** Cut the wire located in the wiring harness on the side of the fuse box coming out of the ignition key.
- BONNET SWITCH** Connect to the YELLOW/BLACK wire located in the wiring harness coming out of the 2 way connector placed under the bonnet opener handle. Insert a diode mod. 1N4004 in the original line.
- DOORS SWITCH** Connect to the YELLOW/BLACK wire located in the wiring harness behind the driver's side sill cover.
- BOOT SWITCH** Connect to the GREY/BLACK wire, at the position nr.1, in the 40 way light blue connector coming out of the central placed behind the left lateral covering in the boot.