



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **LAND ROVER** MOD. **RANGE ROVER** YEAR **03** → PETROL
 DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens behind the passenger's side headlamp, in the engine compartment.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the big wire located in the fuse box. -31: connect to the ground terminal located behind the driver's side bulkhead.
IGNITION WIRE	+15/54: connect to the RED/WHITE wire, in the wiring harness coming out of the 8 way black connector, located in the supply shunt, in the engine compartment.
DIRECTION INDICATORS	Connection with sepatated lines Connect to the wires: BLUE/YELLOW at the position nr.4, BLUE/GREEN at the position nr.11, BLUE/BROWN at the position nr.12 located in the 15 way white connector and BLUE/BROWN at the position nr.6, BLUE/GREEN at the positio nr.8 and BLUE/YELLOW at the position nr.14 in the 15 way black connector. The 15 way white and black connectors are located on the coming out of the central locking unit placed behind the passenger's side bulkhead. Note: Divide the lines by means of diodes.
ELECTRIC WINDOWS	Comfort locking Negative control signal To make the windows locking it is necessary to time at 24s. the RED/BLUE wire, at the position nr.4, located in the 12 way white connector, directly on the coming out of the push-button panel, inside the driver's side door, the same used for the door locking.
CENTRAL DOORS LOCKING	Negative control signal Connect to the RED/BLUE wire at the position nr.4 (lock) and to the WHITE/BLACK wire, at the position nr.3 (unlock), located in the 12 way white connector, directly on the coming out of the push-button panel inside the driver's side door.
IMMOBILISATION POINT	Gasoil pump Cut the GREEN/BLACK wire, at the position nr.26, in the 40 way black connector coming out of the operating central fixed inside the black box placed in the engine compartment, passenger's side.
STARTER	+50: Cut the BLACK/YELLOW wire located in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Connect to the VIOLET/GREEN wire, at the position nr.2, in the 26 way black connector of the white central located under the passenger's side front seat.
DOORS AND BOOT SWITCH	Positive polarity control signal Connect to the RED/BLUE wire, at the position nr.20, in the wiring harness coming out of the 20 way black connector of the white central located under the passenger's side front seat. Note: As the signal is with positive polarity, it is necessary to invert the signal by means of an additional relay.