



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **LEXUS** MOD. **RX 300 \*** YEAR **02** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, passenger's side.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules on the left of the dashboard, driver's side.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 6 mm <sup>2</sup> RED wire located in a multiway connector, at the entrance of the fuse box. <b>-31:</b> connect with a ground terminal directly to the car body.
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the RED/BLUE wire, located in the wiring harness coming out of the 21 way connector, on the coming out of the fuses holder box placed under the driver's side dashboard.
<b>DIRECTION INDICATORS</b>	Connect to the GREEN/BLACK and GREEN/YELLOW wires located in the wiring harness coming out of the relay of the direction indicators placed on the right of the fuses holder box under the driver's side dashboard.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window driver's side:</b> cut the RED wire located in the wiring harness coming out of the engine, inside the driver's side door. <b>Front windows passenger's side:</b> cut the RED wire located in the wiring harness coming out of the engine, inside the passenger's side door.
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<b>Connections art. 3800/vehicle</b> Refer to the <b>diagram nr.164</b> .
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> <b>Ignition general control</b> Cut the BLACK/RED wire located in the wiring harness coming out of the 5 way connector, placed on the right of the ignitio key.
<b>STARTER</b>	<b>+50:</b> Cut the BLACK/WHITE wire, located in the wiring harness coming out of the connector of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate.
<b>DOORS AND BOOT SWITCHES</b>	Connect to the 1mm <sup>2</sup> RED/YELLOW wire located in the wiring harness coming out of the 21 way connector of the fuses holder box under the driver's side dashboard.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 164

Diagram for the interfacing of art. 3800 on  
**LEXUS RX 300 year 2002**  
Art. 3800

The BLUE/RED and BLUE/WHITE wires are located in the wiring harness coming out of the push buttons panel inside the driver's side door.

