



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	LEXUS	MOD.	RX 300	YEAR	02 →	PETROL	<input type="checkbox"/>	DIESEL	<input checked="" type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber, passenger's side.								
CENTRAL UNIT POSITION	Position the modular systems and the modules on the left of the dashboard, driver's side.								
POWER SUPPLY	+30: connect to the 6 mm ² RED wire located in a multiway connector, at the entrance of the fuse box. -31: connect with a ground terminal directly to the car body.								
IGNITION WIRE	+15/54: connect to the RED/BLUE wire, located in the wiring harness coming out of the 21 way connector, on the coming out of the fuses holder box placed under the driver's side dashboard.								
DIRECTION INDICATORS	Connect to the GREEN/BLACK and GREEN/YELLOW wires located in the wiring harness coming out of the relay of the direction indicators placed on the right of the fuses holder box under the driver's side dashboard.								
ELECTRIC WINDOWS	Positive control signal Front window driver's side: cut the RED wire located in the wiring harness coming out of the engine, inside the driver's side door. Front windows passenger's side: cut the RED wire located in the wiring harness coming out of the engine, inside the passenger's side door.								
CENTRAL DOORS LOCKING	Additional motor It is necessary to install a 2 wires motor (Art.1060) as the driver's side door is not provided with an actuating device.								
IMMOBILISATION POINT	Gasoil pump Ignition general control Cut the BLACK/RED wire located in the wiring harness coming out of the 5 way connector, placed on the right of the ignitio key.								
STARTER	+50: Cut the BLACK/WHITE wire, located in the wiring harness coming out of the connector of the ignition key.								
BONNET SWITCH	Install an additional switch on the headlamp support plate.								
DOORS AND BOOT SWITCHES	Connect to the 1mm ² RED/YELLOW wire located in the wiring harness coming out of the 21 way connector of the fuses holder box under the driver's side dashboard.								