



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

MCC

MOD.

SMART*

YEAR.

01 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber.

POWER SUPPLY

+ 30: connect to the 2 mm² RED wire in a multiway connector located at the entrance of the fuse box.
- 31: connect with a cable terminal to one of the ground terminals located behind the left lateral panel, driver's side.

IGNITION WIRE

+ 15/54: connect to the RED wire located at the position marked "E" on the rear of the fuse box.

DIRECTION INDICATORS

Connect to the 1 mm² GREENBLACK and WHITE/BLACK wires located in the multiway connector, on the rear of the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the 2 mm² GREEN wire directly on the coming out of the engine, driver's side.

Front window, passenger's side:

cut the 2 mm² GREEN wire directly on the coming out of the engine, passenger's side.

ACTIVAT./DEACTIVATIONS CONTROLS

Connections antitheft/vehicle

It is suggested to refer to the **diagram nr.116**.

IMMOBILISATION POINT 1

Fuel pump

Cut the GREY/GREEN wire located in a black connector on the front part of the fuse box, under the dashboard, driver's side.

IMMOBILISATION POINT 2

Inertial switch

Cut the 1 mm² BLUE wire of the inertial switch located on the left of the engine compartment, above the brakes pump.

STARTER

+50: Cut the 1,5 mm² BLUE wire in the wiring harness located along the steering column under the dashboard, driver's side.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the left lateral lamp.

DOORS AND BOOT SWITCH

Connect to the BROWN/BLUE wire located in a black connector, in the front part of the fuse box, under the dashboard, driver's side.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°116

To make the connection of Art. 3800 on
MCC SMART year 2001

