



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**MINI**

MOD.

**ONE\***

YEAR.

**02** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the windshield wiper compartment, passenger's side.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned behind the glove compartment, passenger's side.

#### POWER SUPPLY

**+30:** connect to the RED/YELLOW wire in the green connector, behind the passenger's side sill cover.  
**- 31:** connect to a ground terminal located behind the left side bulkhead.

#### IGNITION WIRE

**+15/54:** connect to the WHITE/BLUE wire, in the green connector, behind the passenger's side sill cover.

#### DIRECTION INDICATORS

Connect to the wires: LIGHT BLUE/GREEN at the position nr. 16, LIGHT BLUE/YELLOW at the position nr. 9, LIGHT BLUE/GREEN at the position nr. 18, LIGHT BLUE/BROWN at the position nr. 5, LIGHT BLUE/YELLOW at the position nr. 13, LIGHT BLUE/BROWN at the position nr. 8, in the 54 way white connector, in the central unit behind the passenger's side sill cover.  
Separate the lines with diodes.

#### ELECTRIC WINDOWS

##### Negative control signal

The locking of the windows is obtained timing at 24s. the BLUE/RED wire at the position nr.21, in the 54 way black connector, on the central unit behind the passenger's side sill cover.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

Art. 3800	Vehicle	Position
YELLOW/BLACK	WHITE	Pos. nr. 45, 54 way black connector
GREY/BLACK	LIGHT BLUE	Pos. nr. 38, 54 way black connector
VIOLET	WHITE/BLACK and YELLOW/BROWN	Pos. nr. 3, 54 way black connector
ORANGE	BLUE/RED and YELLOW/RED	Pos. nr. 42, 54 way blue connector
VIOLET/WHITE	ground	Pos. nr. 21, 54 way black connector
ORANGE/WHITE	positive	Pos. nr. 44, 54 way blue connector
		Car body
		Positive supply

Refer to the **diagram nr. 155**.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the WHITE/LIGHT BLUE wire, at the position nr. 3, in the 12 way white connector placed in the rear part of the fuse box, behind the driver's side lateral bulkhead.

#### STARTER

**+50:** Cut the BLACK/LIGHT BLUE wire, at the position nr. 8 of the connector coming out of the ignition key.

#### BONNET SWITCH

Connect to the VIOLET/GREEN wire, at the position nr. 40, in the 54 way connector, in the central unit behind the passenger's side sill cover.

#### DOORS SWITCH

Connect to the BROWN/GREY/YELLOW wire, at the position nr. 22 and to the BROWN/GREY/YELLOW wire, at the position nr. 42, in the 54 way black connector, in the central unit behind the passenger's side sill cover.

#### BOOT SWITCH

Connect to the GREY/BROWN wire, at the position nr. 24, in the 54 way black connector, in the central unit behind the passenger's side sill cover.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 155

Diagram to connect art. 3800 on  
**MINI ONE** year 2002

Central locking unit behind the  
passenger's side bulkhead

