



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR	PETROL	DIESEL
MAZDA	PREMACY	01 →	<input checked="" type="checkbox"/>	<input type="checkbox"/>

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the support of the shock absorber, passenger's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side. Pass the cables through the original rubber core hitch located under the wheelhouse, driver's side.
POWER SUPPLY	+ 30 : connect to the WHITE/RED wire located in a multiway connector at the entrance of the fuse box. - 31 : connect with a cable terminal directly to the car body located to the left of the dashboard, driver's side.
IGNITION WIRE	+ 15/54 : connect to the 1 mm ² LIGHT BLUE/WHITE wire with SILVER references located in a connector placed behind the fuse box.
DIRECTION INDICATORS	Connect to the GREEN/WHITE wire with SILVER references and to the GREEN/BLACK wire with SILVER references located in the wiring harness coming out of the 16 way white connector, on the left of the release switch. Refer to the A section of diagram nr.105 .
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the RED/BLACK wire with SILVER references located in the wiring harness coming out of the 12 way white connector placed on the coming out of the original push-button panel, inside the driver's side door. Front window, passenger's side: cut the GREEN/WHITE wire with SILVER references. Rear window, driver's side: cut the RED/GREEN wire with SILVER references. Rear window, passenger's side: cut the LIGHT BLUE/WHITE wire with SILVER references. The above mentioned wires are located in the wiring harness behind the sill cover, driver's side.
CENTRAL DOORS LOCKING	Negative controls Connect to the PINK/LIGHT BLUE wires with SILVER references (lock) and LIGHT GREEN/RED with SILVER references (unlock) located in the wiring harness behind the sill cover, driver's side; as alternative, in the wiring harness coming out of the 12 way white connector, on the exit of the green central doors locking unit fixed behind the right lateral bulkhead, passenger's side. Refer to the D section of diagram nr.105 .
IMMOBILISATION POINT 1	Fuel pump Cut the BLACK/BLUE wire with SILVER reference located in the wiring harness behind the sill cover, driver's side.
IMMOBILISATION POINT 2	Locking device central unit Cut the BLACK/WHITE wire located in the wiring harness coming out of the locking device central unit fixed on the left of the steering column.
STARTER	+ 50 : Cut the BLACK/BLUE wire located in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.
DOORS SWITCH	Connect to the WHITE/GREEN wire with SILVER reference located in the wiring harness behind the sill cover, driver's side.
BOOT SWITCH	Connect to the GREEN/RED wire with SILVER reference located in the wiring harness coming out of the boot lamp.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

FITTING DIAGRAM N°105

Diagram for the application on **MAZDA PREMACY**

A section

16 way white connector

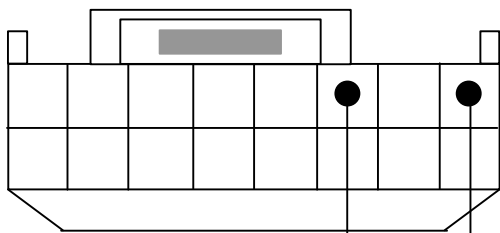


GREEN/BLACK/SILVER

GREEN/WHITE/SILVER

B section


12 way white connector

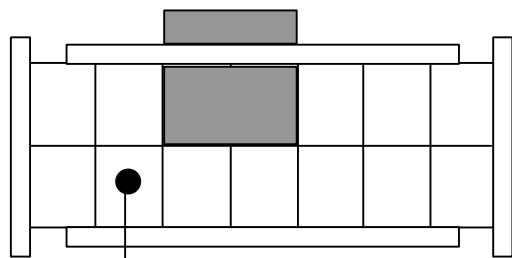

BLACK/WHITE

C section


12 way white connector

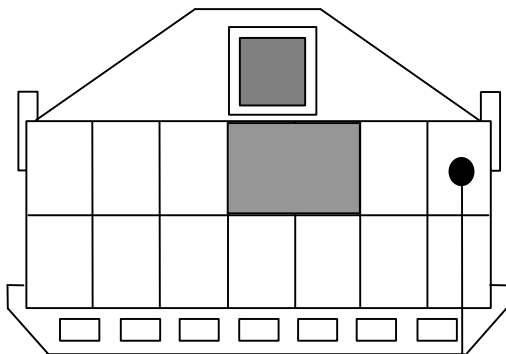

RED/BLACK/SILVER

D section

12 way white connector

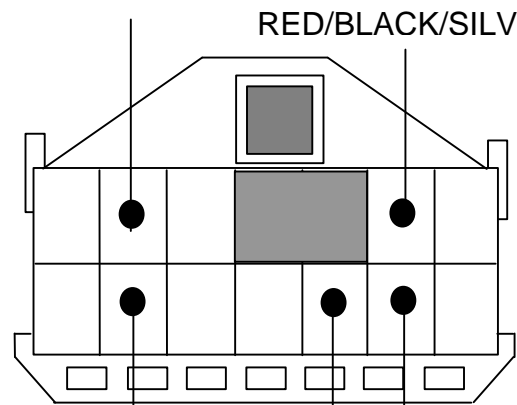

PINK/LIGHT BLUE/SILVER

RED/BLACK/SILVER

LIGHT GREEN/RED

BLUE/SILVER

RED/SILVER