



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MERCEDES** MOD. **CLK *** YEAR. **02** → PETROL DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens behind the passenger's side headlamp.
- CENTRAL UNIT POSITION** Position the modular systems and the modules behind the foot rest, under the passenger's side rug.
- POWER SUPPLY** **+30:** connect to the main wire that supply the fuse box.
- 31: connect to a ground terminal behind the left lateral bulkhead, driver's side.
- IGNITION WIRE** **+15/54:** connect to the 1,5mm² RED/BLUE wire, in the wiring harness of the 4 way connector, in the connectors holder box, in the passenger's side engine compartment.
- DIRECTION INDICATORS** For the front indicators: connect to the BLACK/GREEN wire at the position nr. 7 and BLACK/WHITE at the position nr. 8 in the 28 way black connector located in the fuse box, in the engine compartment under the support of the relay and fuses.
For the rear indicators: connect to the BLACK/WHITE wire, at the position nr.9 and BLACK/GREEN wire at the position nr. 12, in the 14 way black connector, located on the central placed in the driver's side boot. Divide the lines with diodes.
- ELECTRIC WINDOWS** **Comfort closing**
The windows locking is obtained using the original radio control of the vehicle.
- ACTIVAT./DEACTIVATION CONTROLS** **Connections antitheft/vehicle**
- | 38XX | Vehicle | Position |
|--------------|--------------|---------------------------------------|
| YELLOW/BLACK | YELLOW/BLUE | Pos. nr.2 of the light blue connector |
| GREY/BLACK | YELLOW/GREEN | Pos. nr.3 of the light blue connector |
| VIOLET | ground | car body |
| ORANGE | ground | car body |
| VIOLET/WHITE | ground | car body |
| ORANGE/WHITE | ground | car body |
- The 4 way light blue connector is located on the coming out of the central placed in the boot.
- IMMOBILISATION POINT** **Fuel pump**
Cut the BLACK/GREEN wire, at the position nr. 3, in the 7 way black connector, on the central placed in the driver's side boot.
- STARTER** **+50:** Cut the VIOLET wire, in the 6 way violet connector, in the fuse box, in the engine compartment, under the support of the relay and fuses.
- BONNET SWITCH** Connect to the BROWN/RED wire, at the position nr.8, in the 12 way black connector, on the central located in the driver's side boot.
- DOORS SWITCH** Connect to the wires: BROWN/GREY position nr. 6, BROWN/BLUE position nr.11, in the 12 way black connector, on the central located in the driver's side boot.
- BOOT SWITCH** Connect to the BROWN/YELLOW wire, at the position nr. 16, in the 28 way black connector, on the central placed in the driver's side boot.