



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MERCEDES** MOD. **ML*** YEAR **01** → PETROL DIESEL

* Models with original equipment keyless entry system

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the bracket near the headlamp, driver's side.																						
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.																						
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire located in a multiway connector in the fuse box. - 31: connect with a ring terminal directly to the car body.																						
IGNITION WIRE	+ 15/54: connect to the 1,5 mm ² YELLOW/BLACK wire located in the wiring harness (the greatest) coming out from the passenger's compartment and going to the fuse box in the engine compartment.																						
DIRECTION INDICATORS	Connect to the PINK wire at the position E 13 and GREEN wire at the position E 5 located in the lower connector in the fuse box in the engine compartment, alternatively the same wires in the wiring harness (the greatest) coming out of the passenger's compartment and going to the fuse box in the engine compartment.																						
ELECTRIC WINDOWS	Negative control signal Front window, driver's side: cut the light BROWN and WHITE wires. Front window, passenger's side: cut the light BROWN and WHITE wires. Rear window, driver's side: cut the WHITE and light BROWN wires. Rear window, passenger's side: cut the WHITE and light BROWN wires. These connections should be effected directly in the wiring harnesses coming out of the respective serial switches.																						
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicle <table border="0" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">38XX</th> <th style="text-align: left;">Vehicle</th> <th style="text-align: left;">Position</th> </tr> </thead> <tbody> <tr> <td>GREY/BLACK</td> <td>WHITE</td> <td>Wiring harness coming out driver's side door.</td> </tr> <tr> <td>YELLOW/BLACK</td> <td>GREEN</td> <td>Wiring harness coming out driver's side door.</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>Ground</td> <td>Car body</td> </tr> <tr> <td>ORANGE</td> <td>Ground</td> <td>Car body</td> </tr> <tr> <td>VIOLET</td> <td>PINK</td> <td>Wiring harness from passenger's compartment to engine compartment.</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>Ground</td> <td>Car body</td> </tr> </tbody> </table> Refer to A diagram of the dedicated installations manual in the antitheft kit.		38XX	Vehicle	Position	GREY/BLACK	WHITE	Wiring harness coming out driver's side door.	YELLOW/BLACK	GREEN	Wiring harness coming out driver's side door.	VIOLET/WHITE	Ground	Car body	ORANGE	Ground	Car body	VIOLET	PINK	Wiring harness from passenger's compartment to engine compartment.	ORANGE/WHITE	Ground	Car body
38XX	Vehicle	Position																					
GREY/BLACK	WHITE	Wiring harness coming out driver's side door.																					
YELLOW/BLACK	GREEN	Wiring harness coming out driver's side door.																					
VIOLET/WHITE	Ground	Car body																					
ORANGE	Ground	Car body																					
VIOLET	PINK	Wiring harness from passenger's compartment to engine compartment.																					
ORANGE/WHITE	Ground	Car body																					
IMMOBILISATION POINT	Fuel pump Cut the GREEN wire located in the wiring harness coming out of the connector marked P-A, placed behind the fuse-holder box, in the engine compartment, driver's side.																						
STARTER	+50: Cut the PINK wire located in the wiring harness going to the starter or alternatively cut the VIOLET wire in the same wiring harness.																						
BONNET SWITCH	Install an additional switch on the headlamp near the original bonnet bumper rubber.																						
DOORS SWITCH	Connect to the 1 mm ² GREEN wire located in the wiring harness coming out of the connector of the lamp under the dashboard, driver's side.																						
BOOT SWITCH	Connect to the 1 mm ² WHITE wire located in the wiring harness coming out of the connector marked P/D in the fuse box.																						