



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MERCEDES	MOD.	ML	YEAR	03 →	PETROL <input type="checkbox"/>	DIESEL <input checked="" type="checkbox"/>
------	-----------------	------	-----------	------	-------------	---------------------------------	--

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the bracket near the headlamp, driver's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	<p>+ 30: connect to the 4 mm² RED wire located in a multiway connector in the fuse box.</p> <p>- 31: connect with a ring terminal directly to the car body.</p>
IGNITION WIRE	+ 15/54 : connect to the 1,5 mm ² YELLOW/BLACK wire located in the wiring harness (the greatest) coming out from the passenger's compartment and going to the fuse box in the engine compartment.
DIRECTION INDICATORS	Connect to the PINK wire at the position E 13 and GREEN wire at the position E 5 located in the lower connector in the fuse box in the engine compartment, alternatively the same wires in the wiring harness (the greatest) coming out of the passenger's compartment and going to the fuse box in the engine compartment.
ELECTRIC WINDOWS	<p>Negative control signal</p> <p>Front window, driver's side: cut the light BROWN and WHITE wires.</p> <p>Front window, passenger's side: cut the light BROWN and WHITE wires.</p> <p>Rear window, driver's side: cut the WHITE and light BROWN wires.</p> <p>Rear window, passenger's side: cut the WHITE and light BROWN wires.</p> <p>These connections should be effected directly in the wiring harnesses coming out of the respective serial switches.</p>
CENTRAL DOORS LOCKING	<p>Negative control signal</p> <p>Connect with both unlock and lock wires of the antitheft to the PINK wire marked nr. 3371 at the position B8 (in some versions is B2), located in the wiring harness coming out of the 24 way grey connector marked 3, of the central placed behind the fuse box, in the engine compartment, driver's side. NOTE: add a resistance of 180 Ohm in serie to the ORANGE wire of the antitheft.</p>
IMMOBILISATION POINT	<p>Gasoil pump</p> <p>Cut the RED wire at the position nr.13 of the connector nr.2 located behind the fuse box, in the engine compartment, driver's side.</p>
STARTER	+ 50 : Cut the PINK wire at the position nr.12 of the connector nr.2 located behind the fuse box, in the engine compartment, driver's side.
BONNET SWITCH	Install an additional switch on the headlamp near the original bonnet bumper rubber.
DOORS SWITCH	Connect to the 1 mm ² GREEN wire located in the wiring harness coming out of the connector of the lamp under the dashboard, driver's side.
BOOT SWITCH	Connect to the 1 mm ² WHITE wire located in the wiring harness coming out of the connector marked P/D, in the fuse box.