



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

MERCEDES

MOD.

VITO

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the wheelhouse, passenger's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the passenger's side dashboard, on the side of the black central doors locking unit.

POWER SUPPLY

+ 30: connect to the 1,5 mm² RED/WHITE wire located in the wiring harness coming out of the 15 AMP fuse of the fuse box placed under the passenger's side glove compartment.
- 31: connect to one of the ground shuntings located behind the fuse box, under the passenger's side glove compartment.

IGNITION WIRE

+ 15/54: connect to the 2 mm² RED/GREEN wire, at the position nr.2, of the black connector located inside the black connectors protection bag placed under the passenger's side glove compartment.

DIRECTION INDICATORS

Connect to the BLACK/WHITE and BLACK/GREEN wires located in the wiring harness coming out of the lights switch connector.

ELECTRIC WINDOWS

Negative control signal

Front window, driver's side:

Cut the BLACK/BLUE wire with WHITE references.

Front window, passenger's side:

Cut the BLACK/YELLOW wire with WHITE references.

These connections must be done in the wiring harnesses coming out of the respective control switches.

CENTRAL DOORS LOCKING

Original door motor direct control

Cut the WHITE/RED (positive on opening) and BLUE/RED (positive on locking) wires located in the wiring harness coming out of the black connector of the central doors locking unit placed under the passenger's side glove compartment.

IMMOBILISATION POINT

Gasoil pump

Cut the RED/BLACK wire located in the wiring harness coming out of the fuse marked nr. 24, in the fuse box positioned on the left, under the driver's side seat. To make this connection it is suggested to install an additional relay.

STARTER

+ 50: Cut the wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the 1 mm² BROWN/WHITE wire located in the wiring harness that goes along the side of the central doors locking unit placed under the passenger's side glove compartment.

BOOT SWITCH AND LOADING COMPARTMENT

Connect to the 1 mm² BROWN/BLUE wire located in the wiring harness that goes along the side of the central doors locking unit placed under the passenger's side glove compartment.