



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**MITSUBISHI**

MOD.

**CARISMA\***

YEAR.

**01** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the servobrake support, in the engine compartment.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the driver's side dashboard.

#### POWER SUPPLY

+ **30**: connect to the WHITE wire located in the wiring harness coming out of the central doors locking unit placed under the central console.  
- **31**: connect directly to the car body.

#### IGNITION WIRE

+ **15/54**: connect to the BLUE wire in the wiring harness coming out of the connector of the central doors locking unit located under the central console.

#### DIRECTION INDICATORS

Connect to the GREEN/RED and GREEN/BLACK wires located in the wiring harness coming out of the connector of the central doors locking unit placed under the central console.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

Cut the GREEN/RED wire located in the wiring harness coming out of the original switch.

##### Front window, passenger's side:

Cut the RED/YELLOW wire located in the wiring harness coming out of the driver's side door.

##### Rear window, driver's side:

Cut the YELLOW/RED wire with SILVER reference located in the wiring harness coming out of the driver's side door.

##### Rear window, passenger's side:

Cut the WHITE/RED wire with SILVER reference located in the wiring harness coming out of the driver's side door.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

##### 38XX

YELLOW/BLACK

##### Vehicle

BLUE/WHITE (motor)

##### Position

central doors locking unit

GREY/BLACK

BLUE/BLACK (motor)

central doors locking unit

VIOLET

GREEN/RED (BLK)

central doors locking unit

ORANGE

ground

car body

VIOLET/WHITE

ground

car body

ORANGE/WHITE

ground

car body

The connection must be done in the wiring harness coming out of the connector of the central doors locking unit located under the central console.

#### IMMOBILISATION POINT

##### Gasoil pump

Cut the BLACK/WHITE wire located in the wiring harness coming out of the 3 way black connector placed on the electrovalve, in the engine compartment.

#### STARTER

+ **50**: Cut the BLACK/YELLOW wire located in the wiring harness coming out of the connector of the ignition key.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

#### DOORS SWITCH

Connect to the RED/GREEN wire with SILVER references located in the wiring harness under the driver's side sill cover.

#### BOOT SWITCH

Connect to the RED/GREEN wire with BLACK reference located in the wiring harness coming out of the boot lamp.