



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE

**MITSUBISHI**

MOD.

**CARISMA**

YEAR

**98** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, behind the left lateral headlamp.

#### POWER SUPPLY

+ **30**: connect to the SILVER point of the RED/BLUE wire.  
- **31**: connect to the car body.

#### IGNITION WIRE

+ **15/54**: connect to the SILVER point of the BLACK/WHITE wire located in the bundle of cables behind the sill cover, drivers side.

#### DIRECTION INDICATORS

Connect to the SILVER point of the GREEN/RED wire and the SILVER point of the GREEN/BLACK wire in the bundle of cables behind the sill cover, drivers side.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Connect to the SILVER point of the BROWN/BLACK wire (lock) and the SILVER point of the BROWN wire (unlock) located in the bundle of cables behind the sill cover, drivers side.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the 1,5 mm<sup>2</sup> BLACK/WHITE wire of the relay of the fuel pump located in the central tunnel behind the ash receiver.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, near the rubber trim of the bonnet.

#### DOORS AND BOOT SWITCH

Connect to the SILVER point of the GREEN wire in the bundle of cables under the sill cover, drivers side.