



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

MITSUBISHI

MOD.

COLT

YEAR

97 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the shock absorber, driver's side. Position the modular systems and the modules behind the glove box, passenger's side.

POWER SUPPLY

+ 30: connect to the 4 mm² WHITE/RED wire located at the entrance of the fuse box.

- 31: connect to the car body.

DIRECTION INDICATORS

Connect to the 1 mm² GREEN/BLUE wire with SILVER references and to the GREEN/RED wire with SILVER references located in the wiring harness coming out of the 15 way green connector, in the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the 2 mm² GREEN/RED WIRE.

Front window, passenger's side:

cut the 2 mm² RED/YELLOW wire.

Such connections can be made directly in the wiring harness coming out of the 8 way connector, on the output of the original switch.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the 1 mm² BROWN/BLACK wire with SILVER references (lock) and to the BROWN/RED wire with SILVER references (unlock) in the wiring harness coming out of the 13 way black connector of the red central locking unit located on the relay support on the left side, under the steering wheel.

IMMOBILISATION POINT

Fuel pump

Cut the BLACK/WHITE wire at the position nr. 7 in the 8 way white connector of the fuel pump relay located behind the central part of the dash board, behind the car radio.

BONNET SWITCH

Install an additional switch on the headlamp support plate, in correspondence with the driver's side headlamp.

DOORS SWITCH

Connect to the 1 mm² BLACK wire located in the wiring harness coming out of the 5 way white connector, in the fuse box.

BOOT SWITCH

Connect to the 1 mm² RED/GREEN wire with SILVER references located in the wiring harness coming out of the boot lamp.