



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MITSUBISHI** MOD. **PAJERO *** YEAR. **02** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens in the engine compartment, on the support of the passenger's side shock absorber. Pass the cables through the original core hitch located in the bulkhead that divides the engine compartment and the passenger's compartment, passenger's side.

CENTRAL UNIT POSITION The modular systems and the modules should be positioned on the left of the dashboard, driver's side.

POWER SUPPLY **+30:** connect to the 4 mm² RED wire located in a multiway connector, in the fuse box.
-31: connect with a terminal cable directly to the car body.

IGNITION WIRE **+15/54:** Connect to the BLACK/WHITE wire with SILVER reference located in the wiring harness placed on the left, along the steering column.

DIRECTION INDICATORS Connect to the GREEN/RED wire at the position nr.9 and to the GREEN/YELLOW wire with SILVER reference at the position nr.7 located in the 15 way white connector, in the lower part of the fuse box placed under the driver's side dashboard.

ELECTRIC WINDOWS **BUS controls**
The signals to make the windows module connection are not available.

ACTIVAT./DEACTIVATION CONTROLS

Art. 3800	Vehicle	Position
YELLOW/BLACK	BLUE/BLACK	15 way white connector
GREY/BLACK	BLUE/RED	15 way white connector
VIOLET	GREEN/RED pos. nr.9	white connector of the direction indicator
ORANGE	ground	car body
VIOLET/WHITE	ground	car body
ORANGE/WHITE	ground	car body

The 15 way white connector is located in the front part of the fuse box. Refer to the "A" diagram of the dedicated installations manual inside the kit of the antitheft.

IMMOBILISATION POINT **Gasoil pump**
Cut the GREEN/BLACK wire with SILVER reference in the wiring harness coming out of the relay marked "D", on the relay holder box (the little one) located on the side of the battery.

STARTER **+50:** Cut the BLACK/YELLOW wire located in the wiring harness coming out of the ignition key.

BONNET SWITCH Install an additional switch on the front headlamp support plate, near the original rubber bonnet bumper.

DOORS AND BOOT SWITCH Connect to the RED/GREEN wire with SILVER reference located at the position nr.13 of the 15 way white connector, placed in the lower part of the fuse box, under the driver's side dashboard.