



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MITSUBISHI** MOD. **PAJERO*** YEAR **03** → PETROL
 DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION Position the compact alarms and the sirens in the engine compartment, on the shock Pass the cables using the original fairlead located in the driver's side wheelhouse.

CENTRAL UNIT POSITION Position the modular systems and the modules under the dashboard, behind the fuse box.

POWER SUPPLY
+30: connect to the WHITE wire, in the 6 way light blue/white connector located along the steering column.
-31: connect to a ground terminal behind the driver's side bulkhead.

IGNITION WIRE **+15/54:** connect to the BLACK/WHITE wire, in the 6 way light blue/white wire located along the steering column.

DIRECTION INDICATORS Connect to the GREEN/BLUE wires with grey tally mark at the position nr.(and to the GREEN/YELLOW wire with grey tally mark at the position nr.3, in the 12 way grey/white connector, in the frontal part of the fuse box.

ELECTRIC WINDOWS **Mixed motors controls**
Front window, driver's side:
 cut the RED and GREEN wires in the 2 way white connector, inside the relevant door.
Front window, passenger's side:
 cut the RED and GREEN wires in the 2 way white connector, inside the relevant door.
Rear window, driver's side:
 cut the RED and GREEN wires in the 2 way white connector, inside the relevant door.
Rear window, passenger's side:
 cut the RED and GREEN wires in the 2 way white connector, inside the relevant door.

ACTIVAT./DEACTIVATION CONTROLS **Connections antitheft/vehicle**

Art.3800	Vehicle	Position
YELLOW/BLACK	BLUE/BLACK	White connector in the fuse box.
GREY/BLACK	BLUE/RED	At the pos. nr.3 in the white connector.
VIOLET	GREEN/YELLOW/GREY(dir.ind.	12 way grey/white connector.
ORANGE)	Car body
VIOLET/WHITE	Ground	Car body
ORANGE/WHITE	Ground	Car body
	Ground	

The white connector is located behind the side of the fuse box. The connector 12 way grey/white connector is located in the frontal part of the fuse box. Refer to the A diagram of the dedicated installation manual in the kit of the antitheft.

IMMOBILISATION POINT **Gasoil pump**
 Cut the GREEN/BLACK wire with SILVER reference in the wiring harness coming out of the relay marked "D" in the relay holder box (the little) located on the side of the battery.

STARTER **+50:** Cut the BLACK/YELLOW wire in the wiring harness coming out of the ignition key.

BONNET SWITCH Install an additional switch on the headlamp support plate, driver's side.

DOORS AND BOOT SWITCH Connect to the GREEN/RED wire at the position nr.1, in the 20 way white connector, behind the loudspeaker prearrangement, on the driver" side dashboard.