



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE

**MITSUBISHI**

MOD.

**SPACE STAR**

YEAR

**99** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment on the member, driver's side.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, on the left, driver's side.

#### POWER SUPPLY

**+ 30:** connect to the 5 mm<sup>2</sup> WHITE/RED wire located at the entrance of the fuse box.  
**- 31:** connect with a ring terminal directly to the car body.

#### IGNITION WIRE

**+ 15/54:** connect to the BLACK/WHITE wire in the wiring harness, in the white connector above the fuse box.

#### DIRECTION INDICATORS

Connect to the GREEN/RED and GREEN/BLACK wires located in the wiring harness coming out of the white connector, above the fuse box.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the RED wire located in the wiring harness coming out of the respective control switch.

##### Front window, passenger's side:

cut the RED wire located in the wiring harness coming out of the respective control switch.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Connect to the light GREEN wire (lock) and to the RED/BROWN wire (unlock) located in the wiring harness coming out of the relays which control the central doors locking, on the left of the steering column.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the WHITE/RED wire located in the wiring harness coming out of the relay of the fuel pump, under the central tunnel.

#### STARTER

**+50:** Cut the wire located at the position marked "+50" directly in the wiring harness coming out of the ignition key.

#### BONNET SWITCH

Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.

#### DOORS SWITCH

Connect to the RED/GREEN wire located in the wiring harness behind the sill cover, driver's side.

#### BOOT SWITCH

Connect to the RED/GREEN wire located in the wiring harness behind the sill cover, driver's side.