



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE

**NISSAN**

MOD.

**KING-CAB**

YEAR

**97** →

PETROL



DIESEL



#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the wheel housing, driver's side. Position the modular systems and the modules under the dashboard, driver's side. Pass the cables through the core hitch located on the bulkhead that divides the engine compartment and the passenger's compartment, passenger's side.

#### POWER SUPPLY

+ **30**: connect to the general supply wiring at the entrance of the fuse box.  
- **31**: connect to the car body.

#### IGNITION WIRE

+ **15/54**: connect to the 1 mm<sup>2</sup> ORANGE wire with SILVER references in the wiring harness located above the fuse box, under the left dashboard, driver's side.

#### DIRECTION INDICATORS

Connect to the 1 mm<sup>2</sup> GREY/LIGHT BLUE wire with SILVER references and to the GREY/RED wire with SILVER references located in the wiring harness above the fuse box, under the left lateral dashboard, driver's side.

#### ELECTRIC WINDOWS

Not foreseen as original equipment.

#### CENTRAL DOORS LOCKING

Not foreseen as original equipment.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the WHITE/BLUE wire with SILVER references coming out of the 15 amp. fuse, in the fuse box.

#### STARTER

+**50**: Cut the BLACK/GREEN wire located in the wiring harness coming out of the 5 way transparent connector fixed along the steering column.

#### BONNET SWITCH

Install an additional switch along the left bonnet doorstop.

#### DOORS SWITCH

Connect to the 1 mm<sup>2</sup> RED/BLACK wire with SILVER references located in the wiring harness behind the left lateral panel, driver's side.