



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

NISSAN

MOD.

NAVARA*

YEAR.

01 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, driver's side. Pass the cables using the original rubber core hitch located in the panel that divides the engine compartment and the passenger's compartment, near the front window.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the driver's side dashboard.

POWER SUPPLY

+ **30**: connect to the 2mm² WHITE/GREEN wire located in the wiring harness coming out of the TLC operating placed under the driver's side dashboard.
- **31**: connect directly to the 2mm² BLACK wire located in the wiring harness coming out of the TLC operating central placed under the driver's side dashboard.

IGNITION WIRE

+ **15/54**: connect to the 2 mm² WHITE/RED wire LOCATED in the wiring harness coming out of the TLC operating central, under the dashboard, driver's side.

DIRECTION INDICATORS

Connect to the GREEN/YELLOW wire with SILVER reference and to the GREEN/BLACK wire with SILVER reference located in the wiring harness coming out of the TLC operating central placed the driver's side dashboard.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

Cut the BLUE/YELLOW wire.

Front window, passenger's side:

Cut the BLUE/RED wire.

Rear window, driver's side:

Cut the WHITE/BLACK wire.

Rear window, passenger's side:

Cut the RED/BLACK wire.

The connections must be done in the wiring harness coming out of the respective control switches.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

38XX	Vehicle	Position
GREY/BLACK	ground	car body
YELLOW/BLACK	ground	car body
VIOLET/WHITE	ground	car body
ORANGE	ground	car body
VIOLET	BLUE/RED	TLC central outgoing
ORANGE/WHITE	ground	car body

IMMOBILISATION POINT

Fuel pump

Cut the BLACK/RED wire with SILVER reference located in the wiring harness behind the driver's side sill cover.

STARTER

+ **50**: Cut the BLACK/RED wire located in the wiring harness coming out of the grey connector placed near the core hitch coming out of the driver's side door.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the RED/GREEN wire located in the wiring harness coming out of the TLC operating central placed under the driver's side dashboard.

BOOT SWITCH

Connect to the wire located in the wiring harness coming out of the boot lamp.