



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**NISSAN**

MOD.

**PRIMERA**

YEAR.

**02** →

PETROL   
DIESEL

### ALARM/SIREN POSITION

Position the compact alarms and the sirens behind the driver's side headlamp. The cables entrance is located under the driver's side wheelhouse.

### CENTRAL UNIT POSITION

Position the modular systems and the modules under the driver's side dashboard.

### POWER SUPPLY

**+ 30:** connect to a positive general supply cable located in the fuse box.  
**- 31:** connect to a ground terminal located behind the driver's side bulkhead.

### IGNITION WIRE

**+15/54:** Connect to the LIGHT GREEN/BLACK wire, in the 24 way grey connector, on the central located on the right of the steering column.

### DIRECTION INDICATORS

Connect to the GREEN/BLACK wire at the pos. nr.9 and to the GREEN/YELLOW wire at the pos. nr.10, in the 16 way grey connector, on the central located on the right of the steering column.

### ELECTRIC WINDOWS

#### Positive control signal

##### Front window, driver's side:

Cut the WHITE/BLUE wire in the push button panel, inside the driver's side door.

##### Front window, passenger's side:

Cut the ORANGE wire, in the 16 way white connector, coming out of the driver's side door.

##### Rear window, driver's side:

Cut the GREEN/BLUE wire, in the 16 way white connector, coming out of the driver's side door.

##### Rear window, passenger's side:

Cut the RED/YELLOW wire, in the 16 way white connector, coming out of the driver's side door.

### CENTRAL DOORS LOCKING

#### Negative control signal

Connect to the GREY wire (lock) and to the BROWN/YELLOW wire (unlock) in the 24 way white connector, on the central located on the right of the steering column.

### IMMOBILISATION POINT

#### Fuel pump

Cut the BLACK/YELLOW wire on the relay of the fuel pump, behind the driver's side sill cover.

### STARTER

**+50:** Cut the BLACK/WHITE wire, in the 6 way connector, in the ignition key.

### BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

### DOORS SWITCH

Connect to the RED/YELLOW, RED/WHITE, BLUE/ORANGE and BROWN/WHITE wires located in the 24 way white connector, on the central located on the right of the steering column.

### BOOT SWITCH

Connect to the GREEN wire, in the 24 way white connector, on the central located on the right of the steering column.