



VEHICLE SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

NISSAN

MOD.

PRIMERA*

YEAR.

03 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the shock absorber, passenger's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the driver's side dashboard.

POWER SUPPLY

+30: connect to the WHITE/RED wire in the 2 way black connector located in the superior part of the fuse box.

- 31: connect to a ground terminal located behind the driver's side bulkhead.

IGNITION WIRE

+15/54: Connect to the BLACK/WHITE wire, in the white connector, behind the fuse box.

DIRECTION INDICATORS

Connect to the GREEN/BLACK wire at the pos. nr.9 and to the GREEN/YELLOW wire at the pos. nr.10, in the 16 way grey connector, on the central located on the right of the steering column.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

Cut the WHITE/BLUE wire in the push button panel, inside the driver's side door.

Front window, passenger's side:

Cut the ORANGE wire, in the 16 way white connector, coming out of the driver's side door.

Rear window, driver's side:

Cut the GREEN/BLUE wire, in the 16 way white connector, coming out of the driver's side door.

Rear window, passenger's side:

Cut the RED/YELLOW wire, in the 16 way white connector, coming out of the driver's side door.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art. 3800

YELLOW/BLACK

Vehicle

BLUE/RED

Position

16 way grey connector in the central

GREY/BLACK

YELLOW

16 way grey connector in the central

VIOLET

GREEN/YELLOW

position nr.10 in the 16 way grey connector

ORANGE

ground

car body

VIOLET/WHITE

ground

car body

ORANGE/WHITE

ground

car body

The 16 way grey connector is located on the right of the steering column under the dashboard driver's side. Refer to the '**A diagram**' in the dedicated installations manual of the antitheft.

IMMOBILISATION POINT

Fuel pump

Cut the BLACK/YELLOW wire on the relay of the fuel pump, behind the driver's side sill cover.

STARTER

+50: Cut the BLACK/WHITE wire, in the 6 way connector, in the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the RED/YELLOW, RED/WHITE, BLUE/ORANGE and BROWN/WHITE wires located in the 16 way white connector, on the central located on the right of the steering column. Divide the lines with diodes.

BOOT SWITCH

Connect to the GREEN wire, in the 24 way white connector, on the central located on the right of the steering column.