



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**NISSAN**

MOD.

**TINO**

YEAR.

**01** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, behind the passenger's side headlamp.

#### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under the driver's side dashboard.

#### POWER SUPPLY

**+30:** connect to the WHITE wire located in the 2 way black connector, in the fuse box.  
**-31:** connect to one of the ground terminals located behind the driver's side panel.

#### IGNITION WIRE

**+15/54:** Connect to the BLACK/RED wire located in the 6 way white connector, in the fuse box.

#### DIRECTION INDICATORS

Connect to the GREEN/BLACK wire, at the position nr. 15, and to the GREEN/YELLOW wire, at the position nr. 11, in the 16 way white connector, in the central located under the driver's side dashboard, on the side of the steering column.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the GREEN/RED wire, in the 16 poles white connector, in the serial switches panel, in the driver's side door.

##### Front window, passenger's side:

cut the RED/WHITE wire in the wiring harness coming out of the driver's side door.

##### Rear window, driver's side:

Cut the YELLOW wire in the wiring harness coming out of the driver's side door.

##### Rear window, passenger's side:

cut the GREEN/WHITE wire in the wiring harness coming out of the driver's side door.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Connect to the light GREEN/RED wire (lock) and to the GREEN wire (unlock), in the 20 way white connector, located in the central placed under the driver's side dashboard, on the side of the steering column.

#### IMMOBILISATION POINT

##### Gasoil pump

Cut the BROWN wire with SILVER references located in the wiring harness coming out of the 16 way white connector, in the fuse box, under the driver's side dashboard.

#### STARTER

**+50:** Cut the BLACK/WHITE wire located in the wiring harness coming out of the connector of the ignition key.

#### BONNET SWITCH

Install an additional switch on the front headlamp support grill, driver's side.

#### DOORS SWITCH

Connect to the RED/WHITE wire, at the position nr. 7, in the 16 way white connector, in the central placed under the driver's side dashboard, towards the steering column.

#### BOOT SWITCH

Connect to the RED/WHITE wire coming out of the boot lamp.