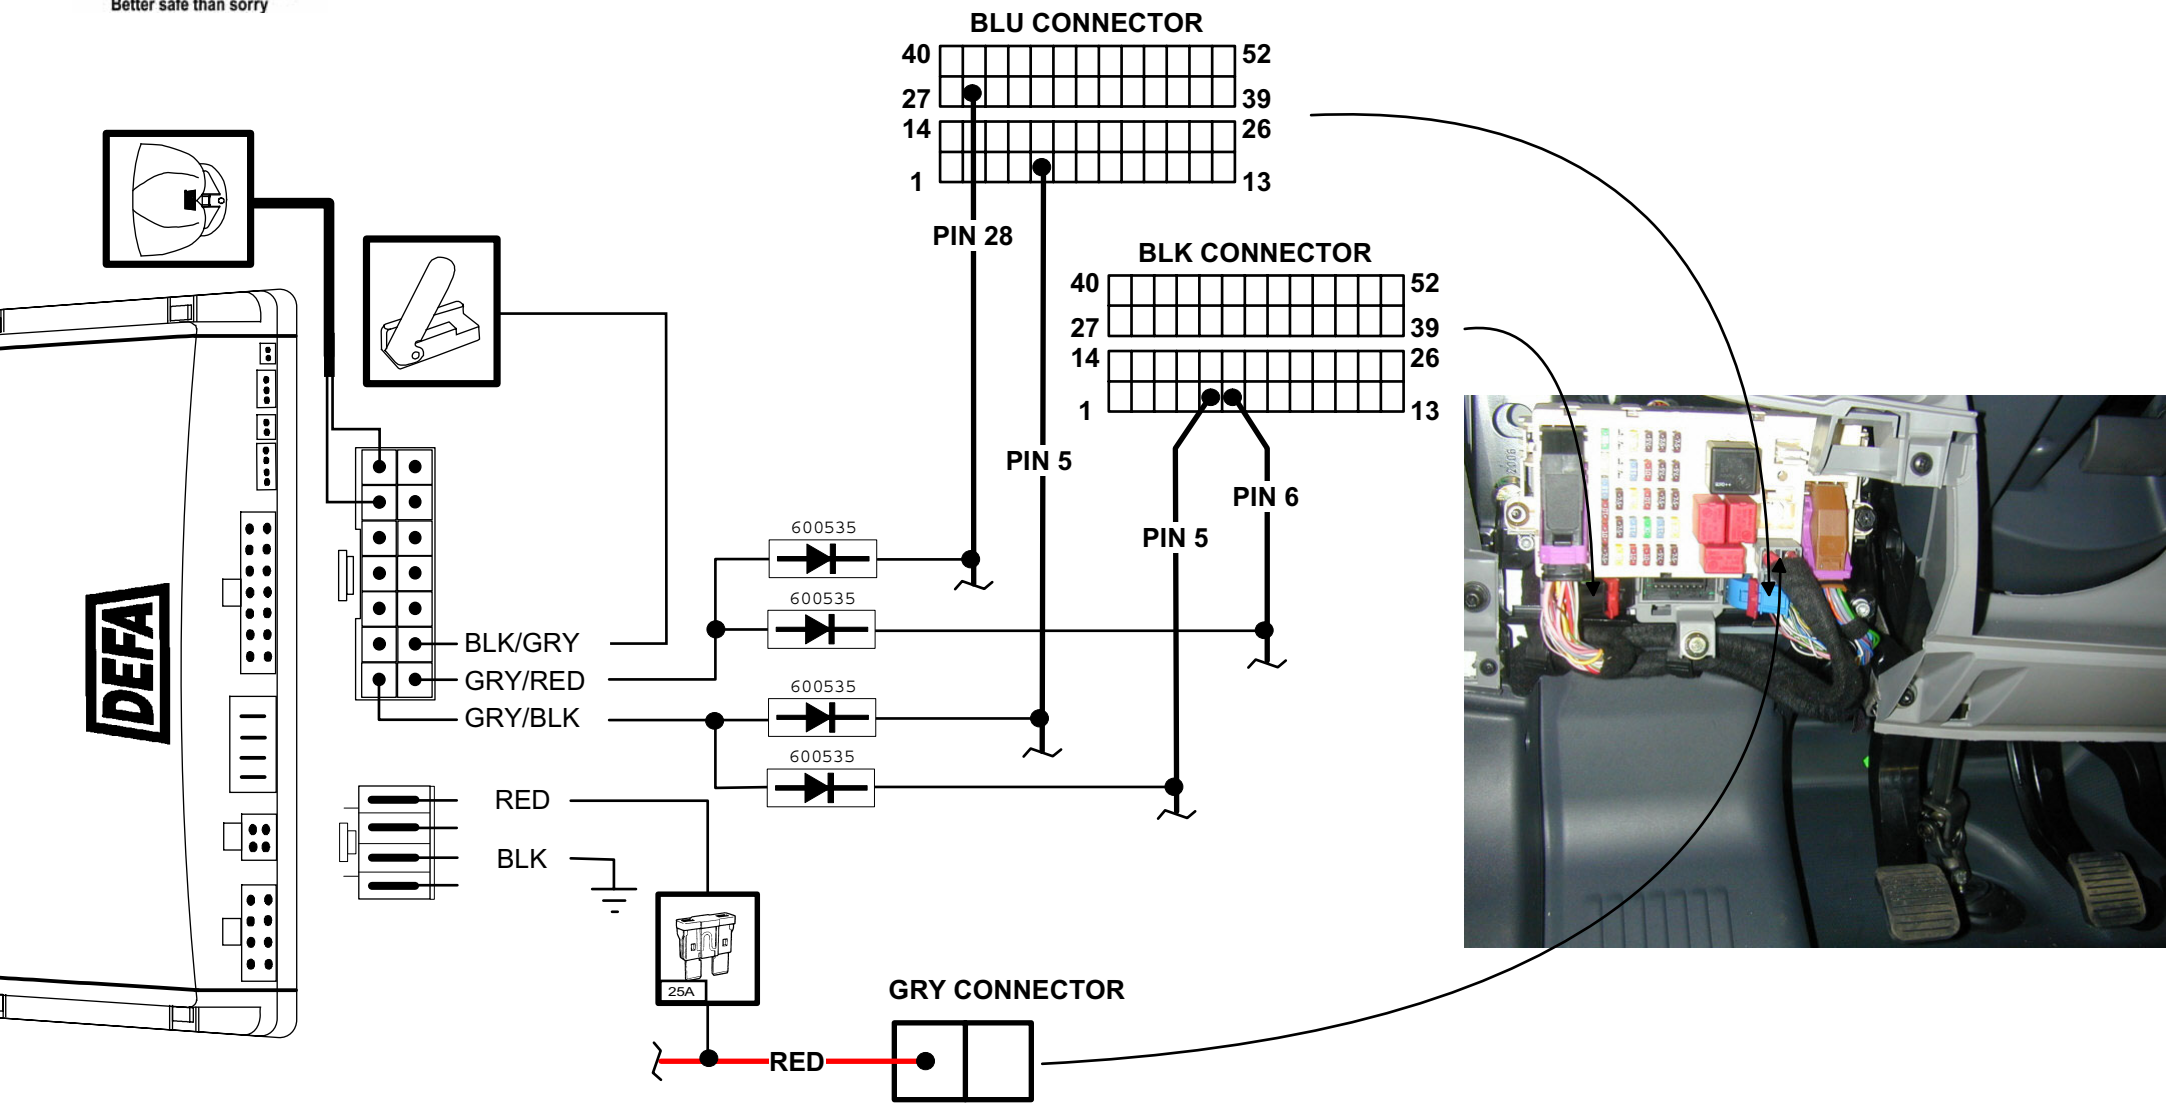

REQUIRED:
- Minimum Required Central Unit rev: F
- Minimum Required SoftWare: 11-5
- Diodes (1 x 600535)

Date : 2006. 11. 01
Rev : A
Page: 1 of 3

NOTE!!!

HOW TO SYNCHRONIZE CAN INTERFACE:

1) INSERT 25A FUSE => LED WILL START FLICKERING
2) TURN ON IGNITION => LED WILL STOP FLICKERING WITHIN 30 SECONDS

THE ALARM IS NOW SYNCHRONIZED

TO ARM WITHOUT SENSORS:

TURN ON AND OFF IGNITION FOR LESS THAN TWO SECONDS.
PRESS ARM-BUTTON ON REMOTE ONCE.

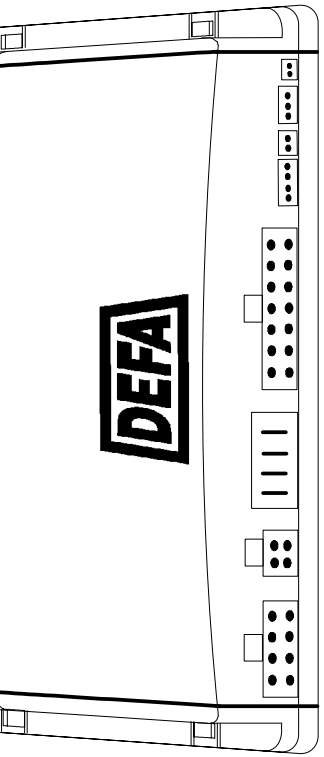

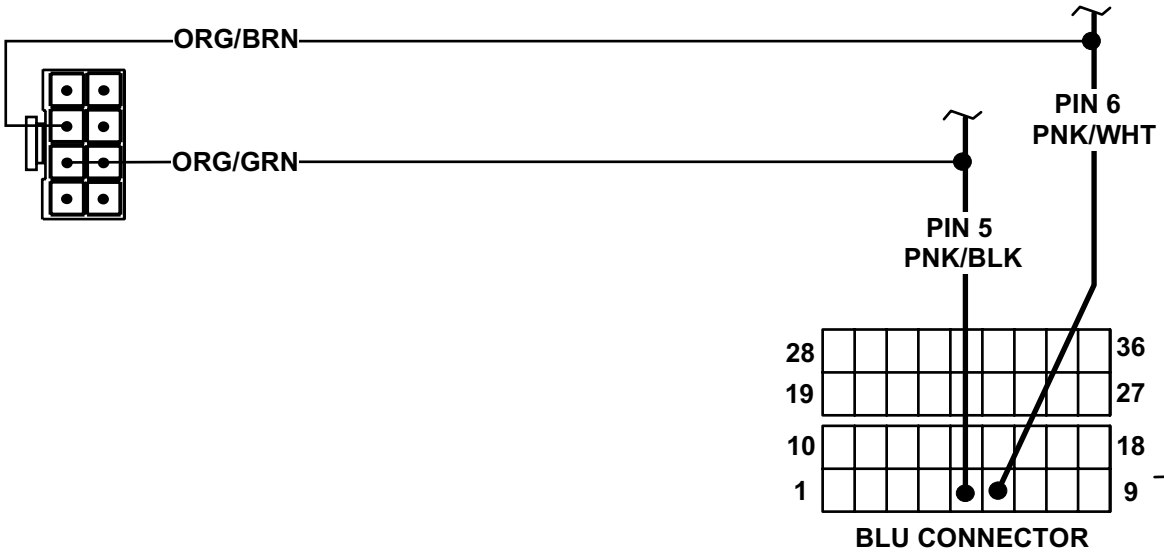

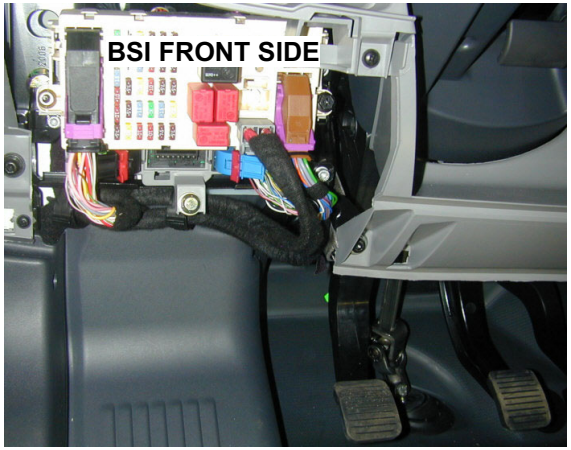

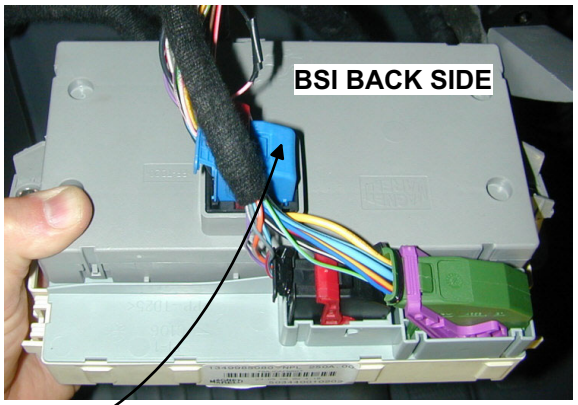

Date : 2006. 11. 01
Rev : A
Page: 2 of 3

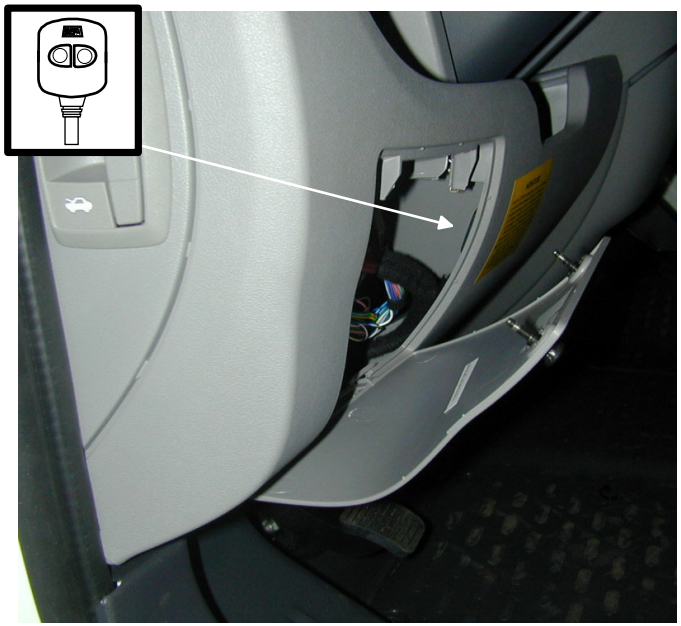

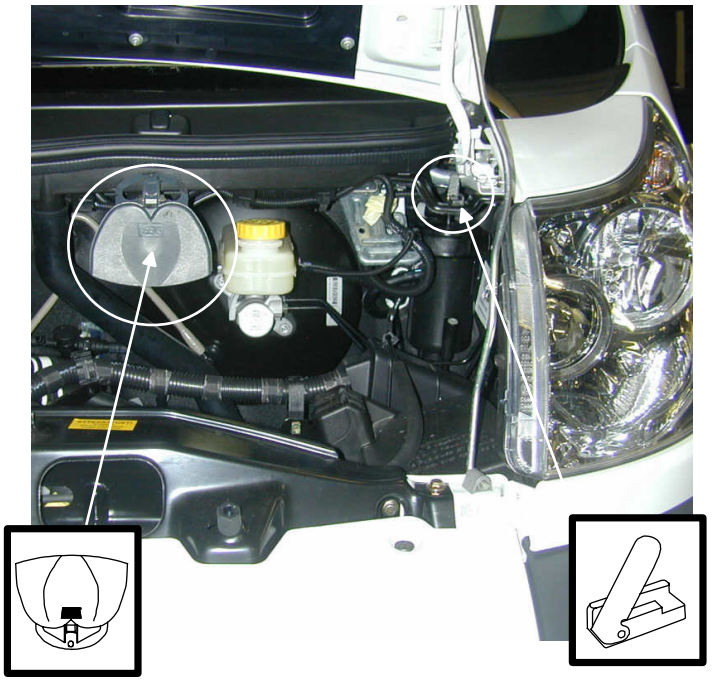

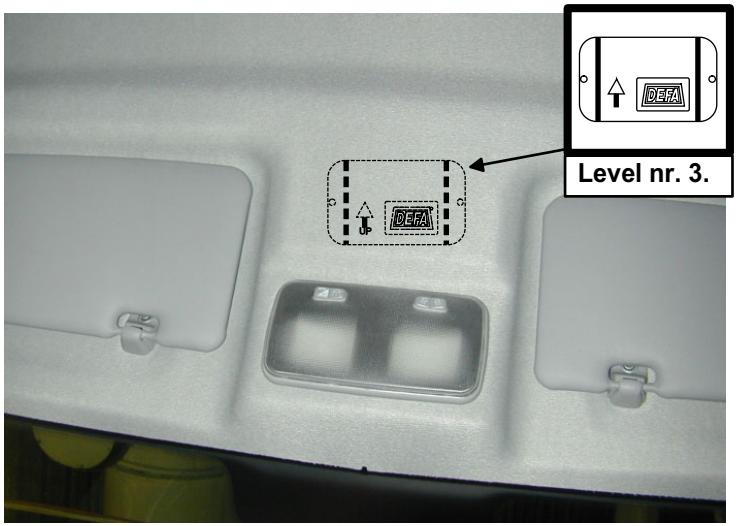

Date : 2006. 11. 01
Rev : A
Page: 3 of 3