


TO SYNCHRONIZE CAN-BUS; PRESS REMOTE SEVERAL TIMES, WITH ONE SEC INTERVALS!

NB! This installation diagram must only be used as a guideline for the installation. Equipment delivered with the car varies considerably from model to model and from market to market. Before starting the installation, be sure to check carefully the original diagram from the car manufacturer. DEFA AS is not liable to compensate for possible damages that may occur due to faulty or insufficient installation manuals.

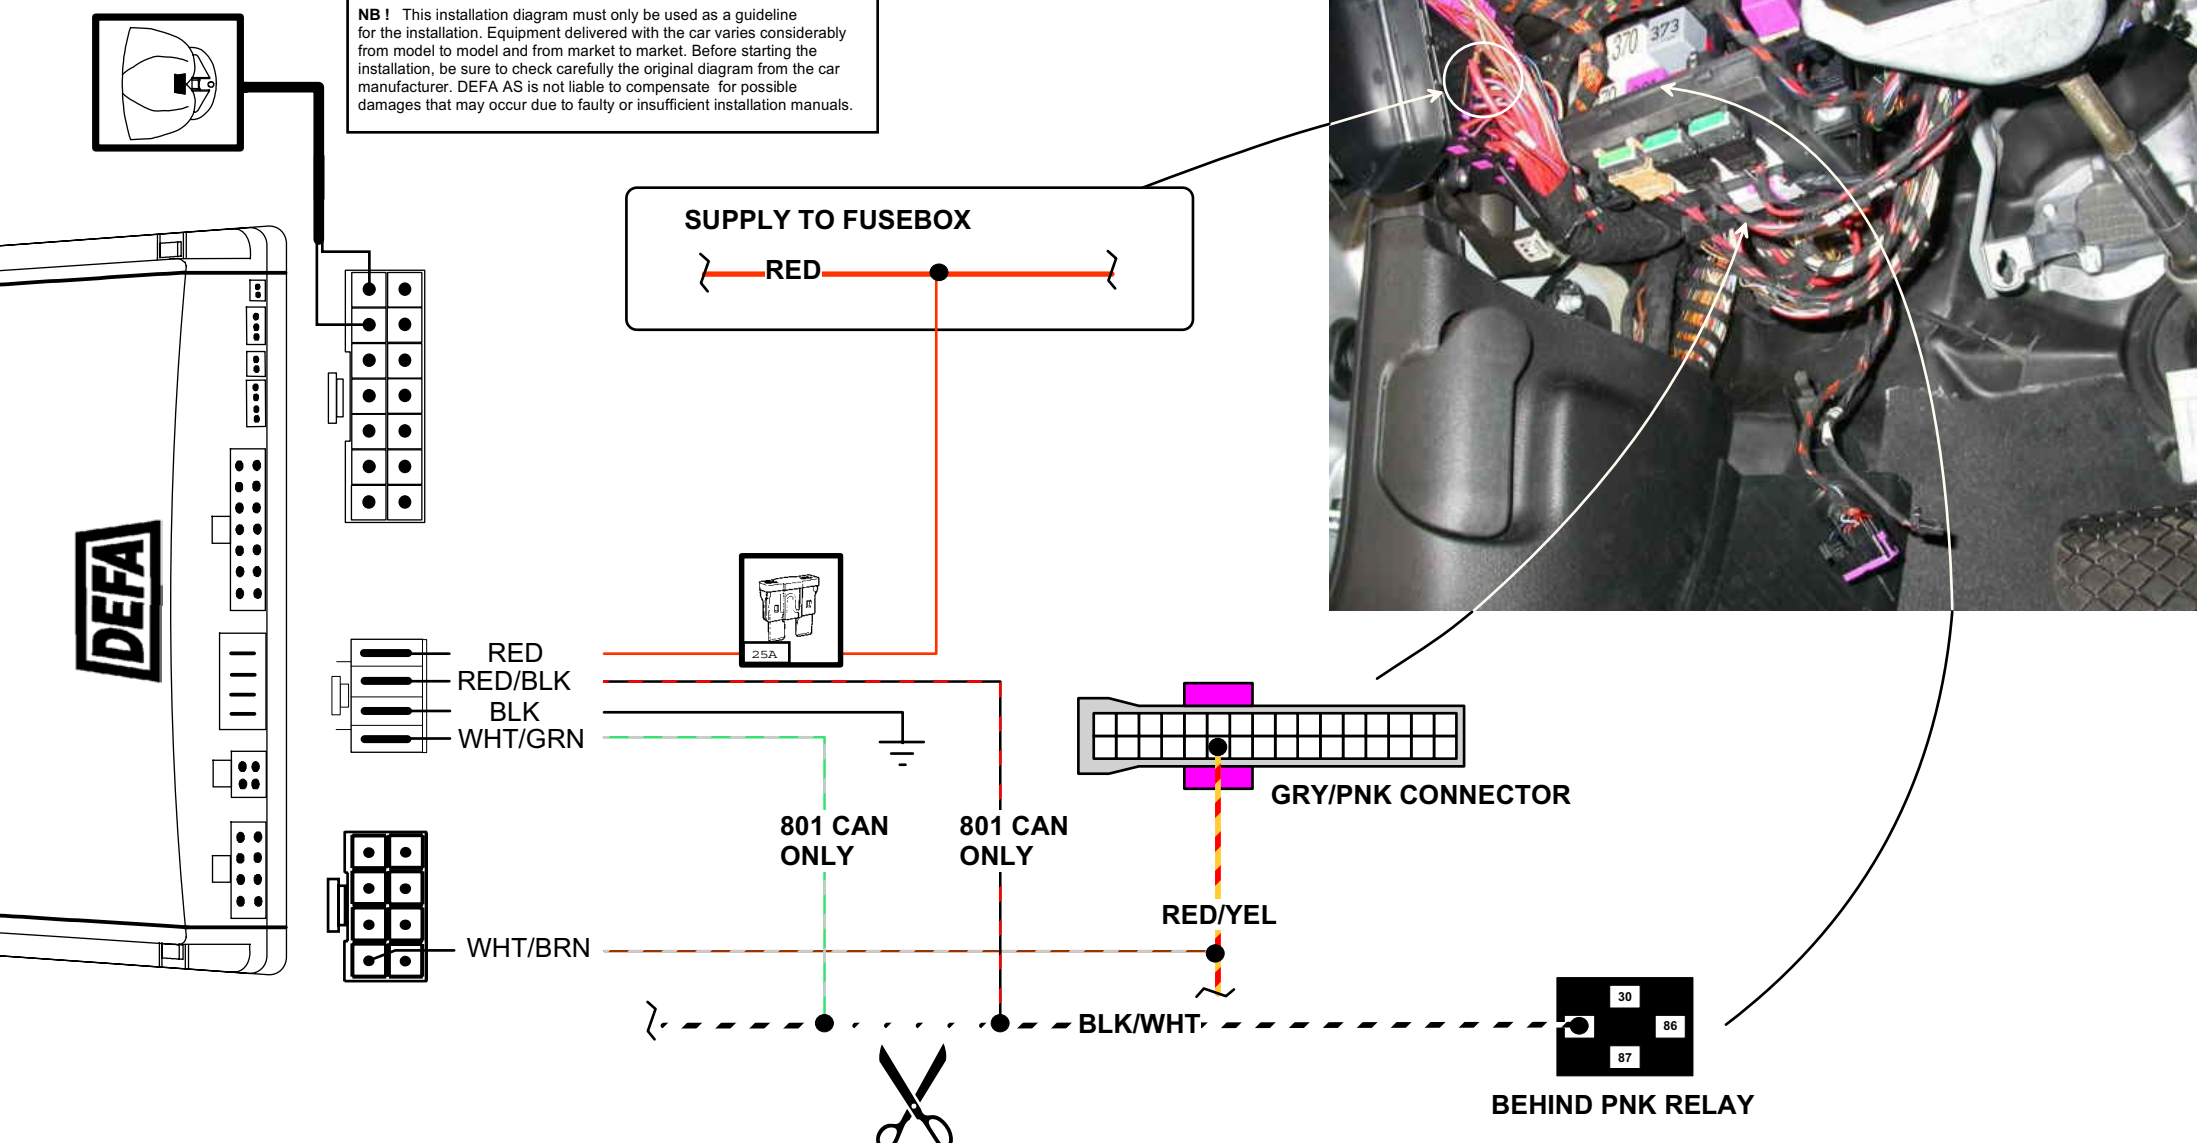

NOTE!!!

REQUIRED:

- Central unit rev: F
- Minimum Required SoftWare: 02-3
- 2 Resistors 180ohm (2 x 600633)

OR:

REQUIRED:


- Minimum Required Central unit rev: G
- Minimum Required SoftWare: 02-3

Date : 2005.01.10


Rev : F


Page: 1 of 3

WITH CENTRAL UNIT REV. F

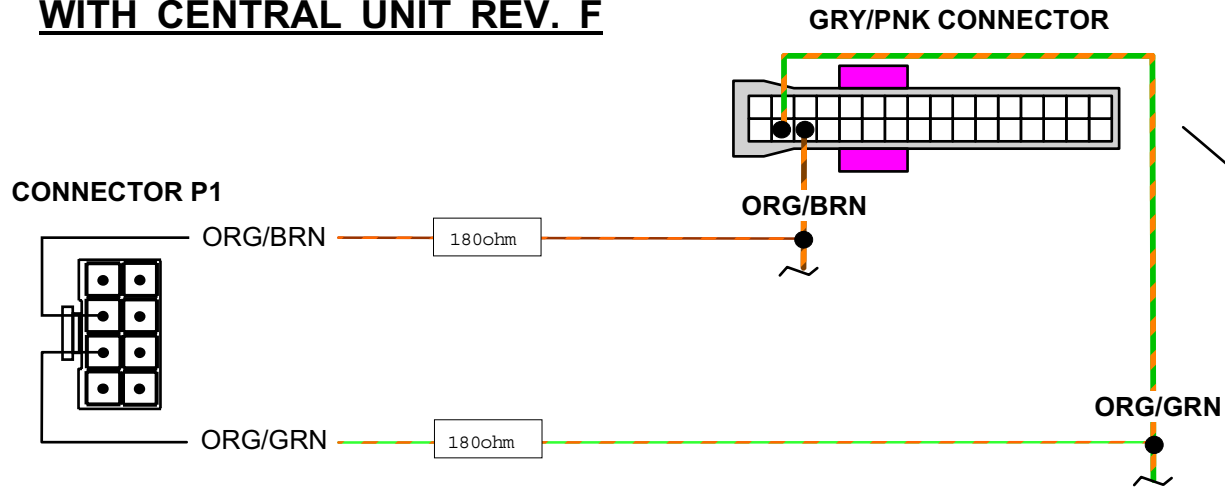

WITH CENTRAL UNIT REV. G and later.

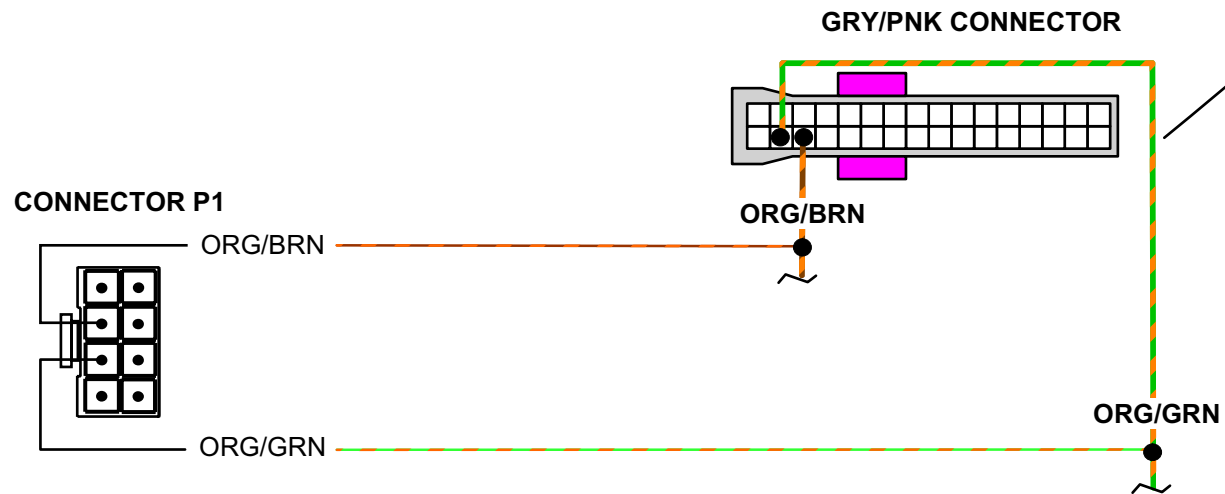

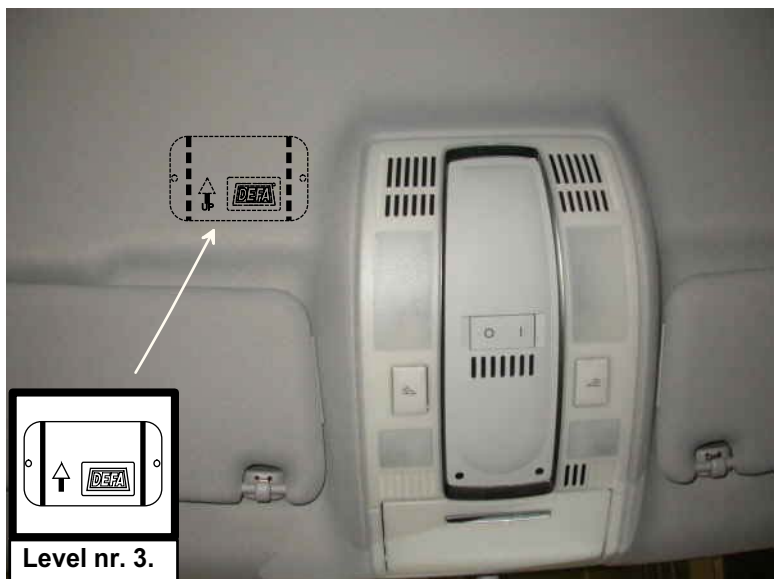

Level nr. 3.