

NB! This installation diagram must only be used as a guideline for the installation. Equipment delivered with the car varies considerably from model to model and from market to market. Before starting the installation, be sure to check carefully the original diagram from the car manufacturer. DEFA AS is not liable to compensate for possible damages that may occur due to faulty or insufficient installation manuals.

**HOOD SWITCH
(LOCATED RIGHT FRONT)**





VIO/BLU

**IF EQUIPPED WITH ORIG.
HOOD SWITCH, DO NOT
INSTALL DEFA SWITCH!**

BLK CONN

BRN CONN

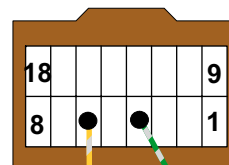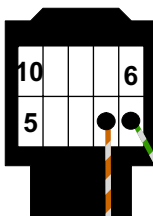


WHT/BRN

WHT/GRN

WHT/YEL


WHT/GRN

4 x 600535

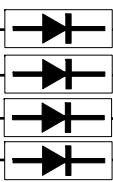

BLK/GRY
GRY/RED
GRY/BLK


RED
BLK

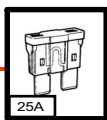

NOTE!!!

HOW TO SYNCHRONIZE CAN INTERFACE:

- 1) Open left front door
 - 2) Insert 25A fuse => LED will start flickering
 - 3) Turn on ignition => LED will stop flickering within 30 seconds
- The alarm is now synchronized

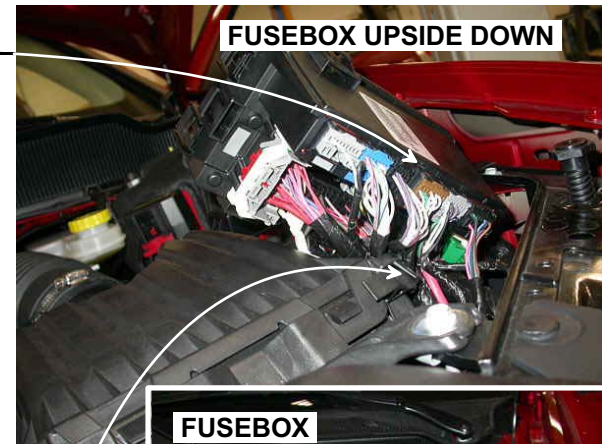

REQUIRED:

- Minimum Central Unit rev: J
- Minimum Required SoftWare: Special A4_071114
- 4 Diodes (1 x 600535)

