
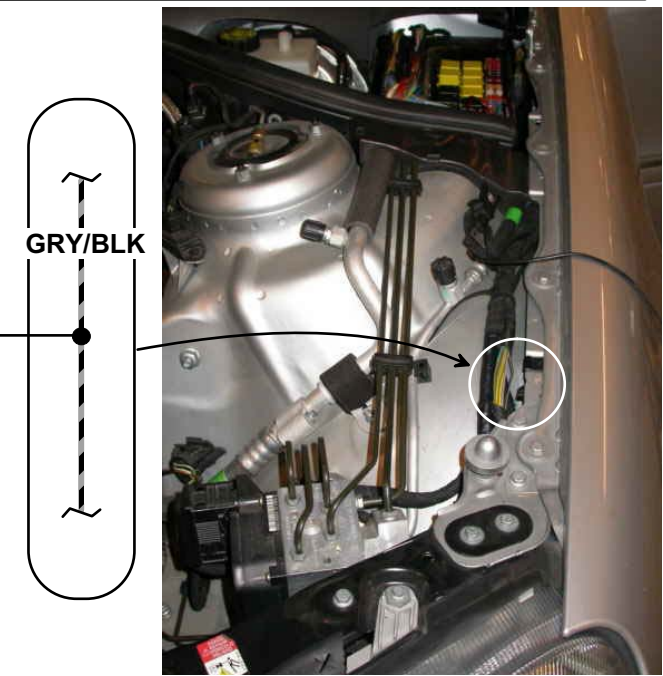


NB ! This installation diagram must only be used as a guideline for the installation. Equipment delivered with the car varies considerably from model to model and from market to market. Before starting the installation, be sure to check carefully the original diagram from the car manufacturer. DEFA A.S is not liable to compensate for possible damages that may occur due to faulty or insufficient installation manuals.

NOTE!! USE ORG. HOOD SWITCH IF POSSIBLE. CONNECT BLK/GRY TO BRN/RED LOCATED BELOW RIGHT HOOD LOCK. SEE PAGE 3!

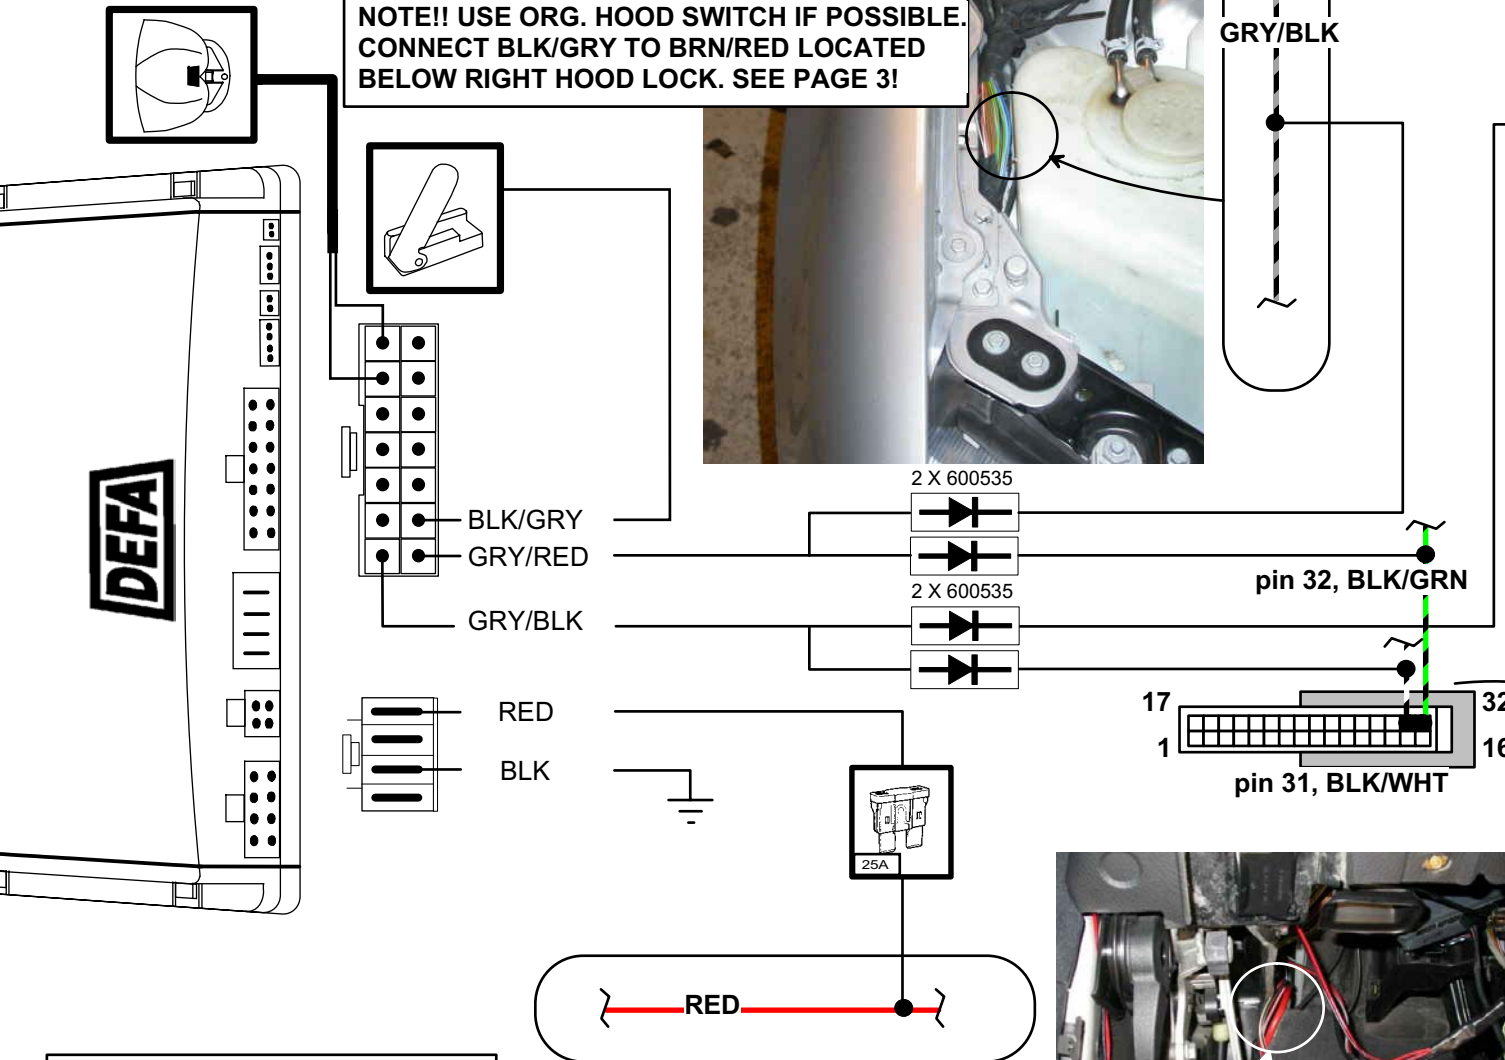

REQUIRED:
 - Central unit rev: F →
 - SW: 00 →
 - Diodes (1 x 600535)

Date : 2004.06.08
 Rev : C
 Page: 1 of 3

