



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

CITROEN

MOD.

C 3

YEAR.

02 →

PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the wheel house, passenger's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the 3 mm ² wire located at the position nr.2, of the 2 way black connector, coming out of the front part of the BSI operating central. - 31: connect to the wire at the position nr. 9, of the 16 way black connector, coming out of the BSI operating central.
IGNITION WIRE	+15/54: connect to the wire, at the position nr. 14, of the 16 way grey connector.
DIRECTION INDICATORS	Connect to the wires at the positions nr.13 and nr.14 of the 16 way black connector.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the BROWN wire, at the position nr.1, coming out of the original push button. Front window, passenger's side: cut the BROWN wire, at the position nr.1, coming out of the original push button. Rear window, driver's side: cut the GREY wire, at the position B4, coming out of the original push button. Rear window, passenger's side: cut the GREY wire, at the position A1, coming out of the original push button.
CENTRAL DOORS LOCKING	Original door motor control signal Cut the wires: WHITE, at the position nr. 13 (lock) and BROWN, at the position nr. 15 (unlock) located in the wiring harness coming out of the 16 way grey connector. Refer to the diagram nr. 146 for Bridge serie antithefts and to the diagram nr. 146A for 3100 serie antithefts.
IMMOBILISATION POINT	Fuel pump Cut the VIOLET wire, at the position nr.9, in the 16 way black connector, behind the left lateral bulkhead, driver's side.
STARTER	+50: Cut the BLUE wire located in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the wire at the position nr. 32 of the green connector, inside the connection with white covering, in the fuse box. Note: the polarity of the lamp is positive.
BOOT SWITCH	If the boot is provided with the lamp, connect directly to the negative control signal coming out from the same; as alternative install an additional push button.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°146

Diagram to make the lock and unlock of the doors on
CITROEN C3 year 2002
(for Bridge serie antithefts)

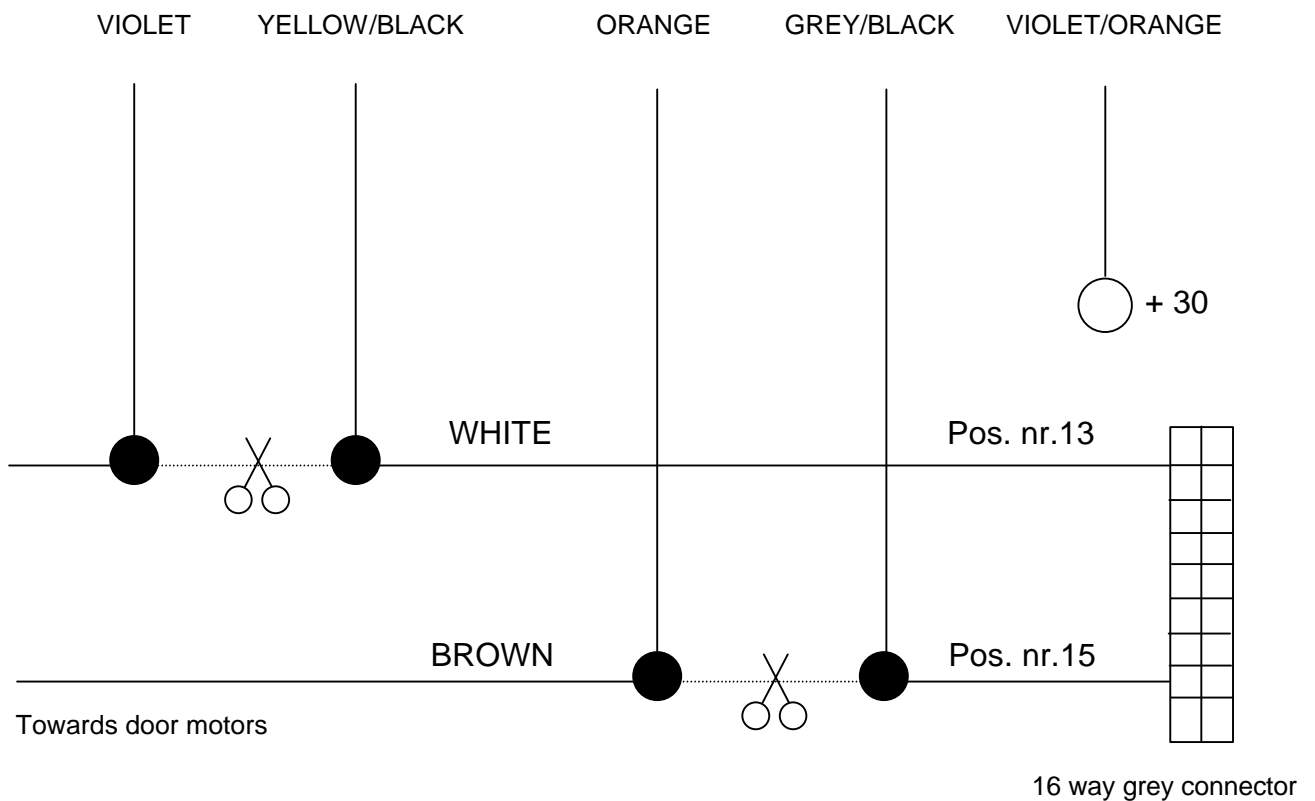



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°146A

Diagram for lock/unlock of the doors on
CITROEN C 3 year 2002
(for 3100 and 3900 series antithefts)

