



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

CITROEN

MOD.

C 3

YEAR.

02 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the wheel house, passenger's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+30: connect to the 3 mm² wire located at the position nr.2, of the 2 way black connector, coming out of the front part of the BSI operating central.
- 31: connect to the wire at the position nr. 9, of the 16 way black connector, coming out of the BSI operating central.

IGNITION WIRE

+15/54: connect to the wire, at the position nr. 14, of the 16 way grey connector.

DIRECTION INDICATORS

Connect to the wires at the positions nr.13 and nr.14 of the 16 way black connector.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the BROWN wire, at the position nr.1, coming out of the original push button.

Front window, passenger's side:

cut the BROWN wire, at the position nr.1, coming out of the original push button.

Rear window, driver's side:

cut the GREY wire, at the position B4, coming out of the original push button.

Rear window, passenger's side:

cut the GREY wire, at the position A1, coming out of the original push button.

CENTRAL DOORS LOCKING

Original door motor control signal

Cut the wires: WHITE, at the position nr. 13 (lock) and BROWN, at the position nr. 15 (unlock) located in the wiring harness coming out of the 16 way grey connector. Refer to the **diagram nr. 146** for Bridge serie antithefts and to the **diagram nr. 146A** for 3100 serie antithefts.

IMMOBILISATION POINT

Gasoil pump

Cut the BROWN wire, in the wiring harness coming out of the inertial switch located on the support of the shock absorber, driver's side.

STARTER

+50: Cut the BLUE wire located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the wire at the position nr. 32 of the green connector, inside the connection with white covering, in the fuse box.

Note: the polarity of the lamp is positive.

BOOT SWITCH

If the boot is provided with the lamp, connect directly to the negative control signal coming out from the same; as alternative install an additional push button.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°146

Diagram to make the lock and unlock of the doors on
CITROEN C3 year 2002
(for Bridge serie antithefts)

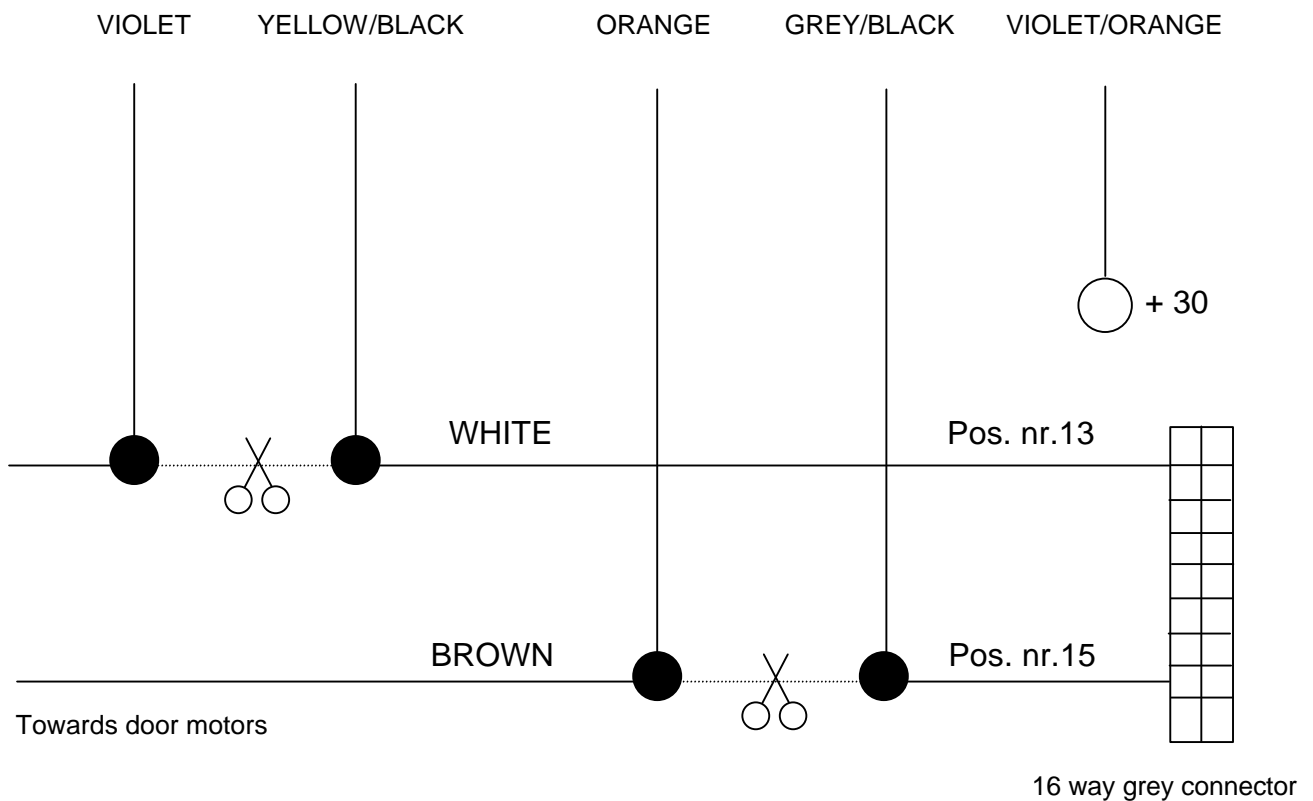



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°146A

Diagram for lock/unlock of the doors on
CITROEN C 3 year 2002
(for 3100 and 3900 series antithefts)

