



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it


MAKE	CITROEN	MOD.	C3*	YEAR	03 →	PETROL <input checked="" type="checkbox"/> DIESEL <input type="checkbox"/>
------	----------------	------	------------	------	-------------	---

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the driver's side wheel house, near the original horns.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect with a cable terminal to a clamp marked '+30' in the feed rod located in the black box placed on the side of the battery, in the engine compartment. - 31: connect with a cable terminal to a clamp marked 'GND' in the feed rod located in the black box placed on the side of the battery, in the engine compartment.
IGNITION WIRE	+15/54: connect to the 2,5 mm ² LIGHT BLUE wire located in the connector coming out of the ignition key.
DIRECTION INDICATORS	Connect to the GREEN wire at the position nr. 13, marked 1142 and to the WHITE wire at the position nr.14, marked nr.263, coming out of the 16 way black connector, in the fuse box.
ELECTRIC WINDOWS	Positive control signal Timed signal Refer to the fitting diagram nr. 194.
ACTIVAT./DEACTIVATION CONTROLS	Connections antithefts/vehicle Refer to the fitting diagram nr. 196.
IMMOBILISATION POINT 1	Fuel pump Cut the VIOLET wire at the position nr.9, in the 16 way black connector, behind the left lateral bulkhead, driver's side.
IMMOBILISATION POINT 2	Relay pump supply Cut the LIGHT BROWN wire marked nr. 1235, at the position nr.11, coming out of the connector marked 'GRIS' placed in the driver's side fuse box, in the engine compartment.
STARTER	+50: Cut the YELLOW wire located in the wiring harness coming out of the 3 way connector placed on the left of the steering column.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the wire at the position nr. 32, in the green section of the 40 way white connector, in the fuse box, under the driver's side dashboard. Note: the polarity of the lamp is positive.
BOOT SWITCH	Connect to the BLACK wire, at the position nr. 16, in the grey connection of the 40 way connector, in the fuse box.

FITTING DIAGRAM NR.196

Diagram for the interfacing of art. 3800 on
CITROEN C3 year 2003

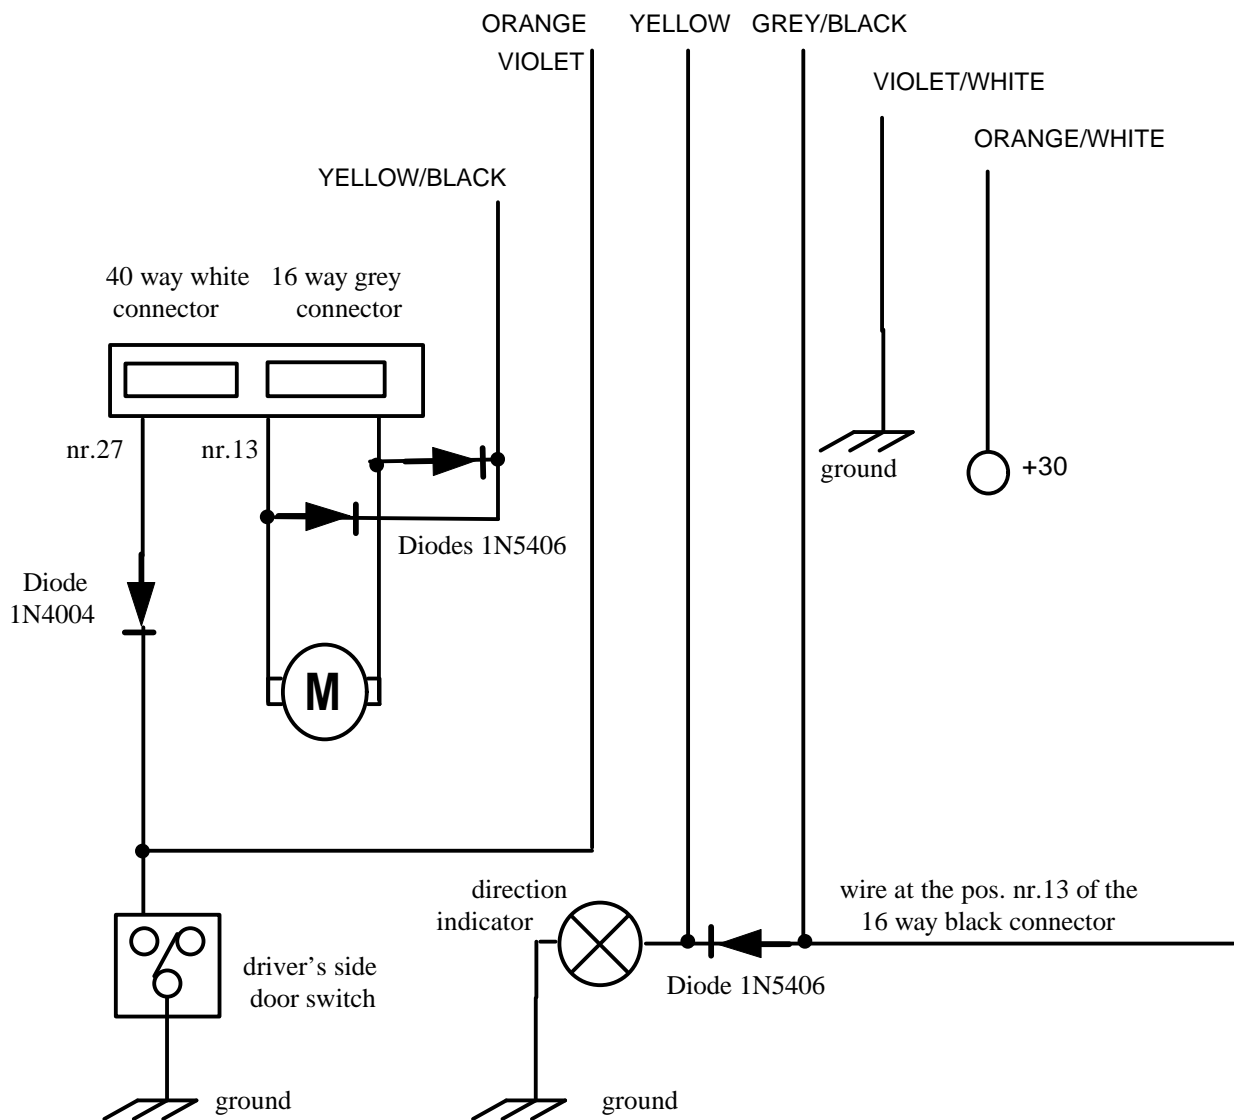

FITTING DIAGRAM NR.194

Diagram to make the windows locking with automatism on
CITROEN C3 year 2003

