



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it


MAKE **CITROEN** MOD. **C3*** YEAR **03** → PETROL
 DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the driver's side wheel house, near the original horns.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the 3 mm ² YELLOW wire, at the position nr.2, of the 2 way grey/yellow connector coming out of the front part of the BSI operating central. - 31: connect to the wire coming out of the cable terminal located behind the left lateral bulkhead, driver's side.
IGNITION WIRE	+15/54: connect to the 2,5 mm ² LIGHT BLUE wire located in the connector coming out of the ignition key.
DIRECTION INDICATORS	Connect to the GREEN wire at the position nr. 13, marked nr.1142 and to the WHITE wire at the position nr.14, marked nr.263, coming out of the 16 way black connector, in the fuse box.
ELECTRIC WINDOWS	Positive control signal Timed signal Refer to the fitting diagram nr. 194.
ACTIVAT./DEACTIVATION CONTROLS	Connections antithefts/vehicle Refer to the fitting diagram nr. 196.
IMMOBILISATION POINT	Gasoil pump Cut the YELLOW wire at the position nr.13, in the wiring harness coming out of the 16 way black connector marked "PM1", placed in the box behind the battery.
STARTER	+50: Cut the BLUE wire located in the wiring harness coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS SWITCH	Connect to the LIGHT BLUE wire at the position nr. 32, in the green section of the 40 way white connector, in the fuse box, under the driver's side dashboard. Note: the polarity of the lamp is positive.
BOOT SWITCH	Connect to the BLACK wire, at the position nr. 16, in the grey connection of the 40 way connector, in the fuse box.

FITTING DIAGRAM NR.196

Diagram for the interfacing of art. 3800 on
CITROEN C3 year 2003

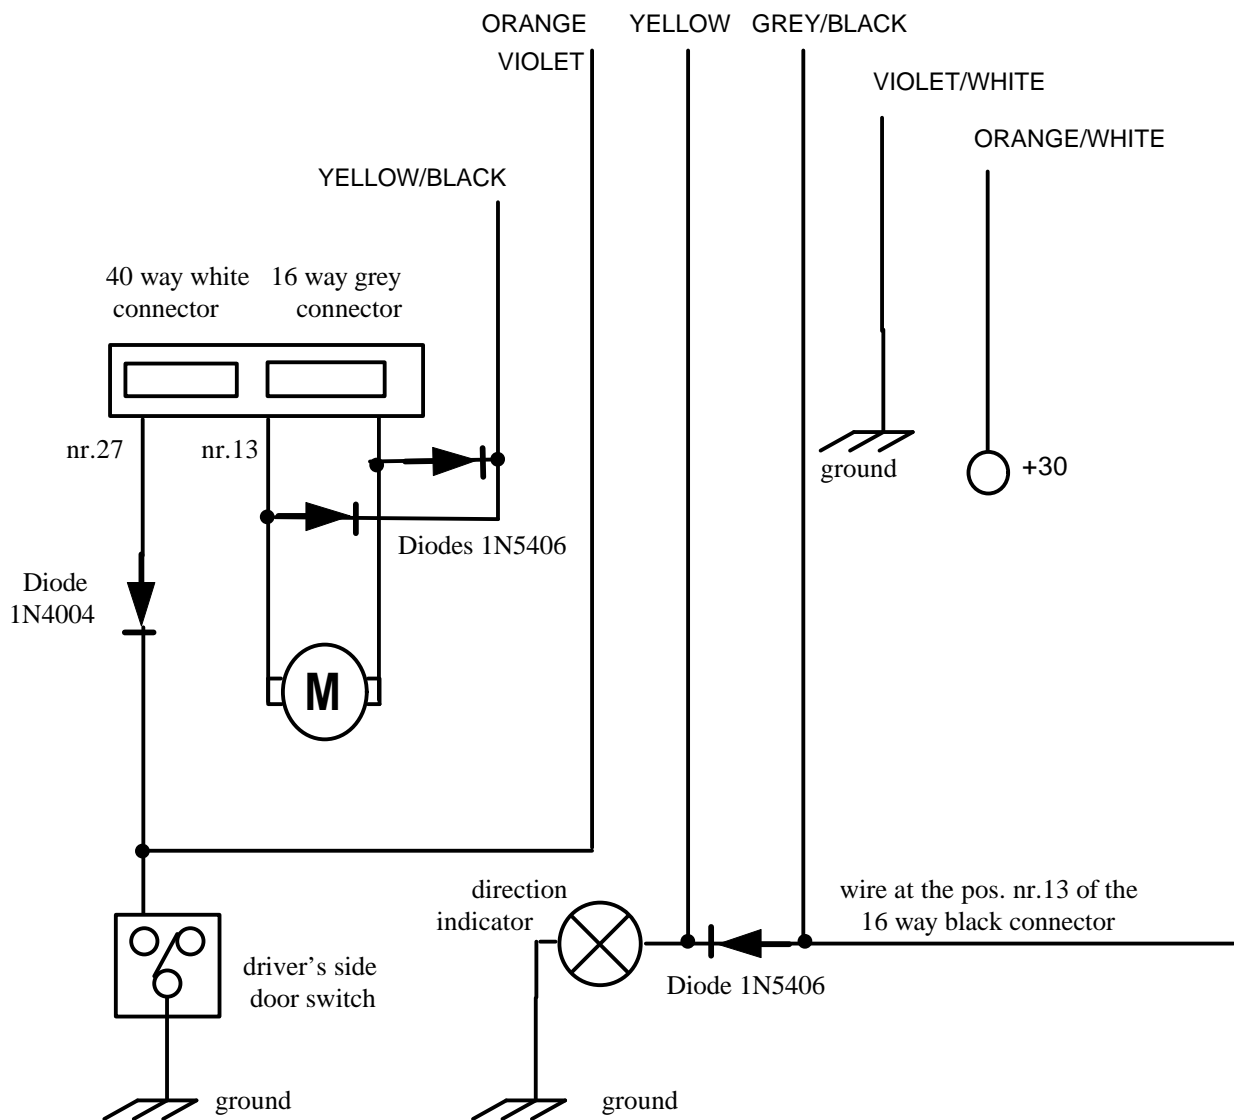

FITTING DIAGRAM NR.194

Diagram to make the windows locking with automatism on
CITROEN C3 year 2003

