



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **CITROEN** MOD. **XSARA PICASSO *** YEAR. **02** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber.
POWER SUPPLY	+30: connect to the 4 mm ² WHITE wire located in a multiway connector at the entrance of the fuse box. -31: connect with a cable terminal to one of the ground terminals located behind the lateral bulkhead, driver's side.
IGNITION WIRE	+15/54: connect to the wire located at the position nr. 22, of the 26 way blue connector, coming out of the operating central unit.
DIRECTION INDICATORS	Connect to the 1 mm ² wires at the positions 14 and 15 located in the 16 way black connector coming out of the operating central unit.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the PINK wire located at the position nr. 5. Front window, passenger's side: cut the BLUE wire located at the position nr. 5. These positions are in the connectors coming out of the correspondent serial push buttons. Refer to the diagram nr.166 .
ACTIVAT./DEACTIVATION CONTROLS	To connect the antitheft of the 3800 serie it is necessary to refer to the diagram nr. 163 .
IMMOBILISATION POINT	Inertial switch Cut the 1 mm ² BLUE wire of the inertial switch located on the left of the engine compartment, above the brakes pump.
STARTER	+50: Cut the 1,5 mm ² BLUE wire located in the wiring harness along the steering column, under the dashboard driver's side. It is suggested to install an additional relay.
BONNET SWITCH	Install an additional switch on the front headlamp support plate near the left lateral headlamp.
DOORS SWITCH	Connect to the wires at the positions nr. 6, nr. 11, nr. 12 and nr. 13 of the 26 way blue connector located on the coming out of the operating central unit. Divide the lines by means of 4 diodes.
BOOT SWITCH	Connect to the wire nr. 319 on the coming out of the boot lamp.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS


REV. 00

www.cobra.it

FITTING DIAGRAM N°163

Diagram for the connection of art. 3800 on
CITROEN XSASA PICASSO year 2002

Connectors coming out of the BSI original operating central

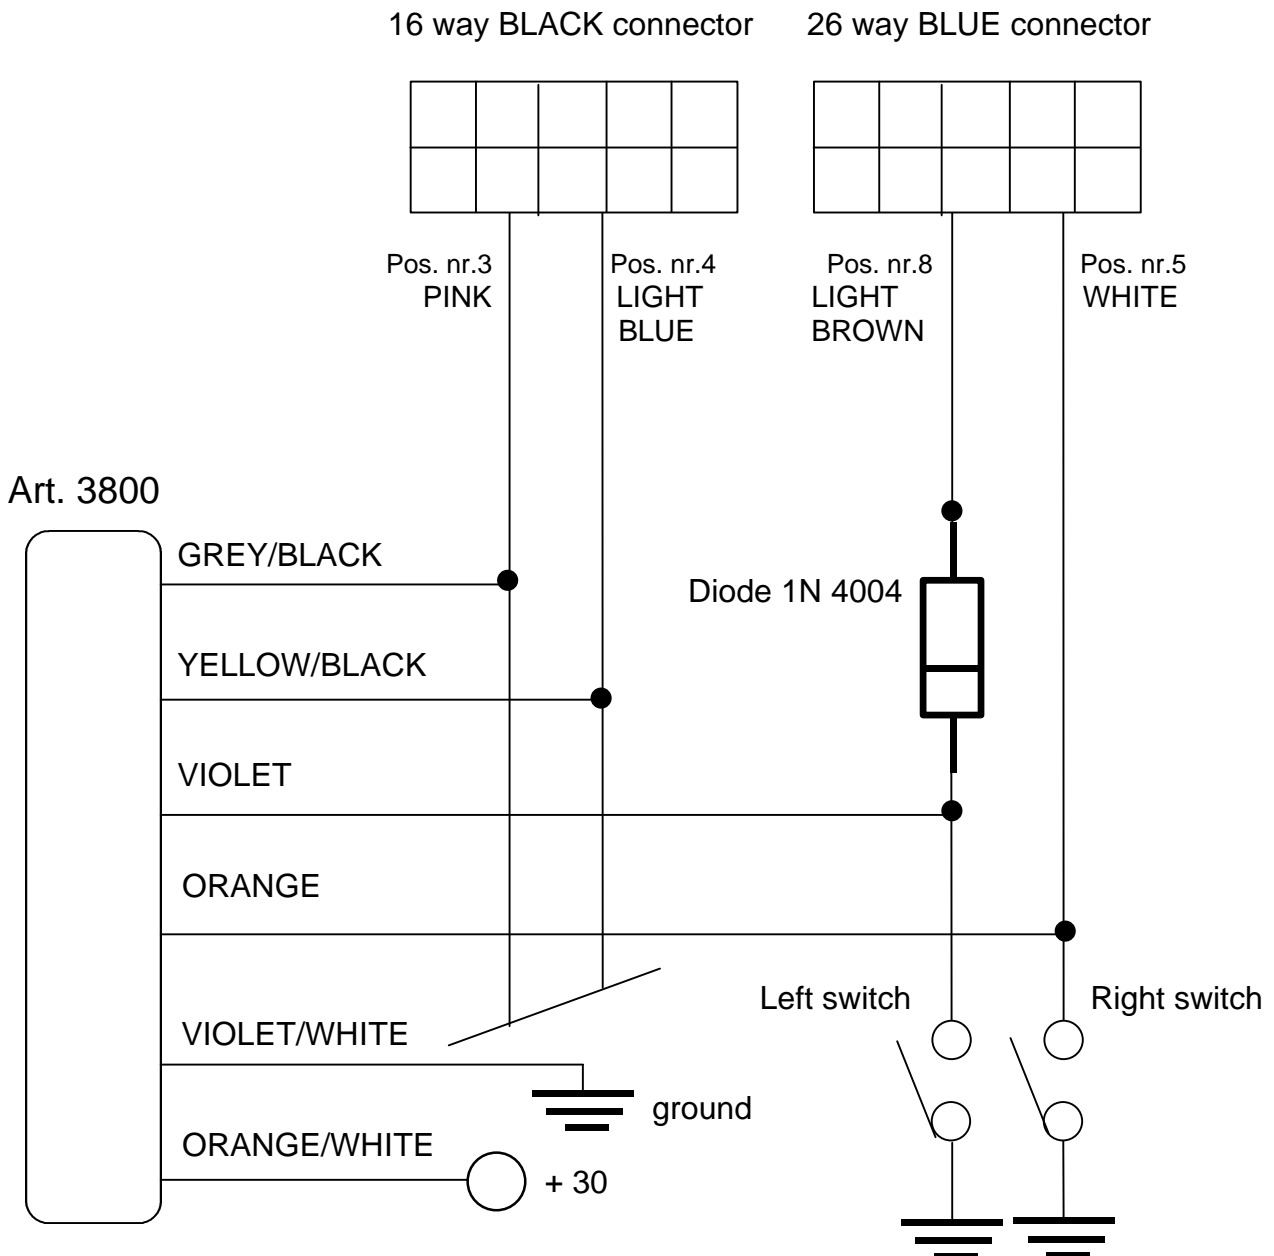

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

cixsp02gbbt.doc



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°166

Diagram to make the windows locking on CITROEN XSARA PICASSO year 2002

