



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FIAT	MOD.	STILO	YEAR	02 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
<b>ALARM/SIREN POSITION</b>									
<b>CENTRAL UNIT POSITION</b>									
<b>POWER SUPPLY</b>									
<b>IGNITION WIRE</b>									
<b>DIRECTION INDICATORS</b>									
<b>ELECTRIC WINDOWS</b>									
<b>CENTRAL DOORS LOCKING</b>									
<b>IMMOBILISATION POINT</b>									
<b>STARTER</b>									
<b>BONNET SWITCH</b>									
<b>DOORS SWITCH</b>									
<b>BOOT SWITCH</b>									



**CAR SECURITY**

**SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS**

**REV. 00**


www.cobra.it

**FITTING DIAGRAM N° 122**

Diagram for direction indicators connection and for doors and boot perimetrical connection on **FIAT STILO** year 2002

**A section**

**Direction indicators connection**

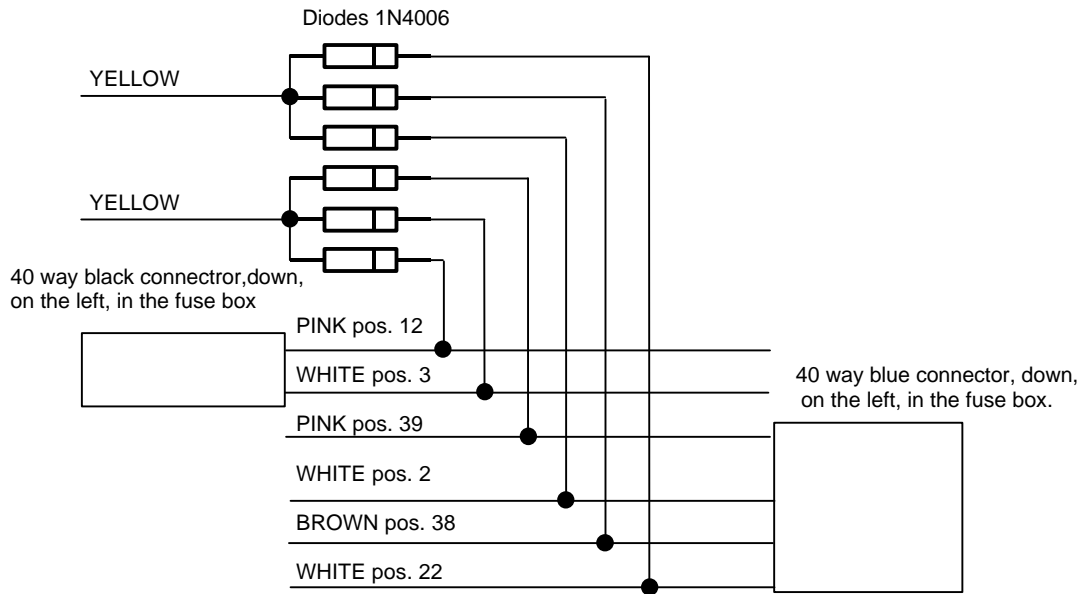

**B section**

**Doors perimetrical connection**

40 way black connector, down, on the left, in the fuse box



**C section**

**Boot perimetrical connection**

