



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FORD	MOD.	FOCUS	YEAR	98 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION									
CENTRAL UNIT POSITION									
POWER SUPPLY									
IGNITION WIRE									
DIRECTION INDICATORS									
ELECTRIC WINDOWS									
CENTRAL DOORS LOCKING									
IMMOBILISATION POINT									
STARTER									
BONNET SWITCH									
DOOR SWITCH									
BOOT SWITCH									



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS


REV. 00

www.cobra.it

FITTING DIAGRAM N°58

Diagram for windows locking (with automatism) on
FORD FOCUS and FORD FOCUS*

Bridge serie antitheft

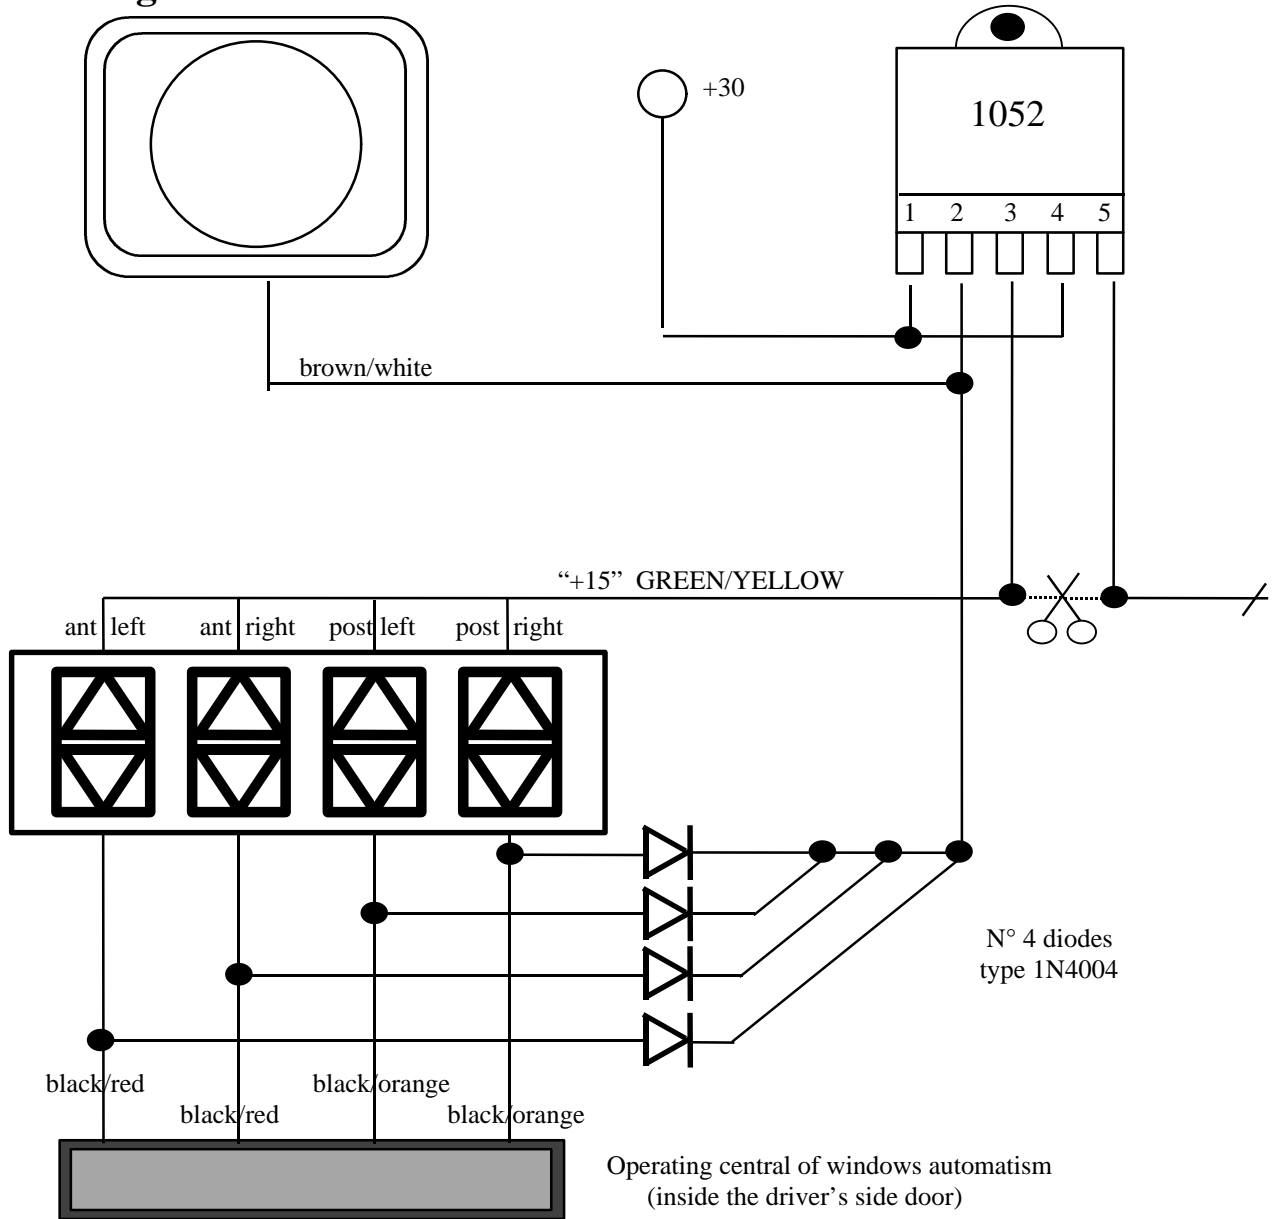

These connections can be made directly in the connector coming out of the windows control switch located in the driver's side door. As the electric windows have the automatism, it is necessary to install the module Art. 1052 and the 4 diodes to avoid the current return harmful for the windows that are not used.