



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**LANCIA**

MOD.

**LYBRA\***

YEAR.

**01** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the left in the engine compartment.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the left side of the dashboard, driver's side.

#### POWER SUPPLY

+ 30: connect to the 4 mm<sup>2</sup> RED wire located at the entrance of the fuse box.  
- 31: connect with a ring terminal directly to the car body.

#### IGNITION WIRE

+ 15/54: connect to the BLUE wire at the position nr. 7 of the 19 way white connector.

#### DIRECTION INDICATORS

Connect to the PINK/WHITE wire in the 14 way connector and to the PINK wire in the 12 way connector located in the front part of the fuse box.

#### ELECTRIC WINDOWS

##### Negative control signal

To obtain the windows closing it is necessary to connect to the BLUE/WHITE wire located at the position nr. 18, in the 18 way white connector coming out of the multiservice central unit located under the sill cover, passenger's side, and extend the command to 24s.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antitheft/vehicle

##### Art.3800

GREY/BLACK

YELLOW/BLACK

VIOLET

ORANGE

ORANGE/WHITE

VIOLET/WHITE

##### vehicle

GREY

YELLOW/GREEN

WHITE/GREEN

WHITE/GREEN

+30

GND

##### Position

pos.4, 18 way white connector

pos.5, 18 way white connector

door outgoing, driver's side

door outgoing, passenger's side

positive in the fuse box

ground

Refer to **diagram nr.101**.

#### IMMOBILISATION POINT

##### Gasoil pump

Cut the ORANGE/WHITE wire coming out of the fuse nr. 2 of the superior fuse box, located under the dashboard, driver's side.

#### STARTER

+50: Cut the RED/BLACK wire located in the wiring harness coming out of the connector of the ignition key.

#### BONNET SWITCH

Install an additional switch on the headlamp support plate.

#### DOORS SWITCH

For the front doors: connect to the 0,5 mm<sup>2</sup> BROWN/GREEN and WHITE/RED wires located in the 18 way connector. For the rear doors: connect to the 0,5 mm<sup>2</sup> GREEN and GREEN/WHITE wires located in the 16 way black connector.

#### BOOT SWITCH

Connect to the 0,5 mm<sup>2</sup> GREY/BLACK wire in the 16 way black connector.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

SCHEMA DI INSTALLAZIONE N°101

Diagram for the interfacing of art. 3800 on  
**LANCIA LYBRA** year 2001

Art. 3800

The GREY and YELLOW/GREEN wires are located in the 18 way white connector.

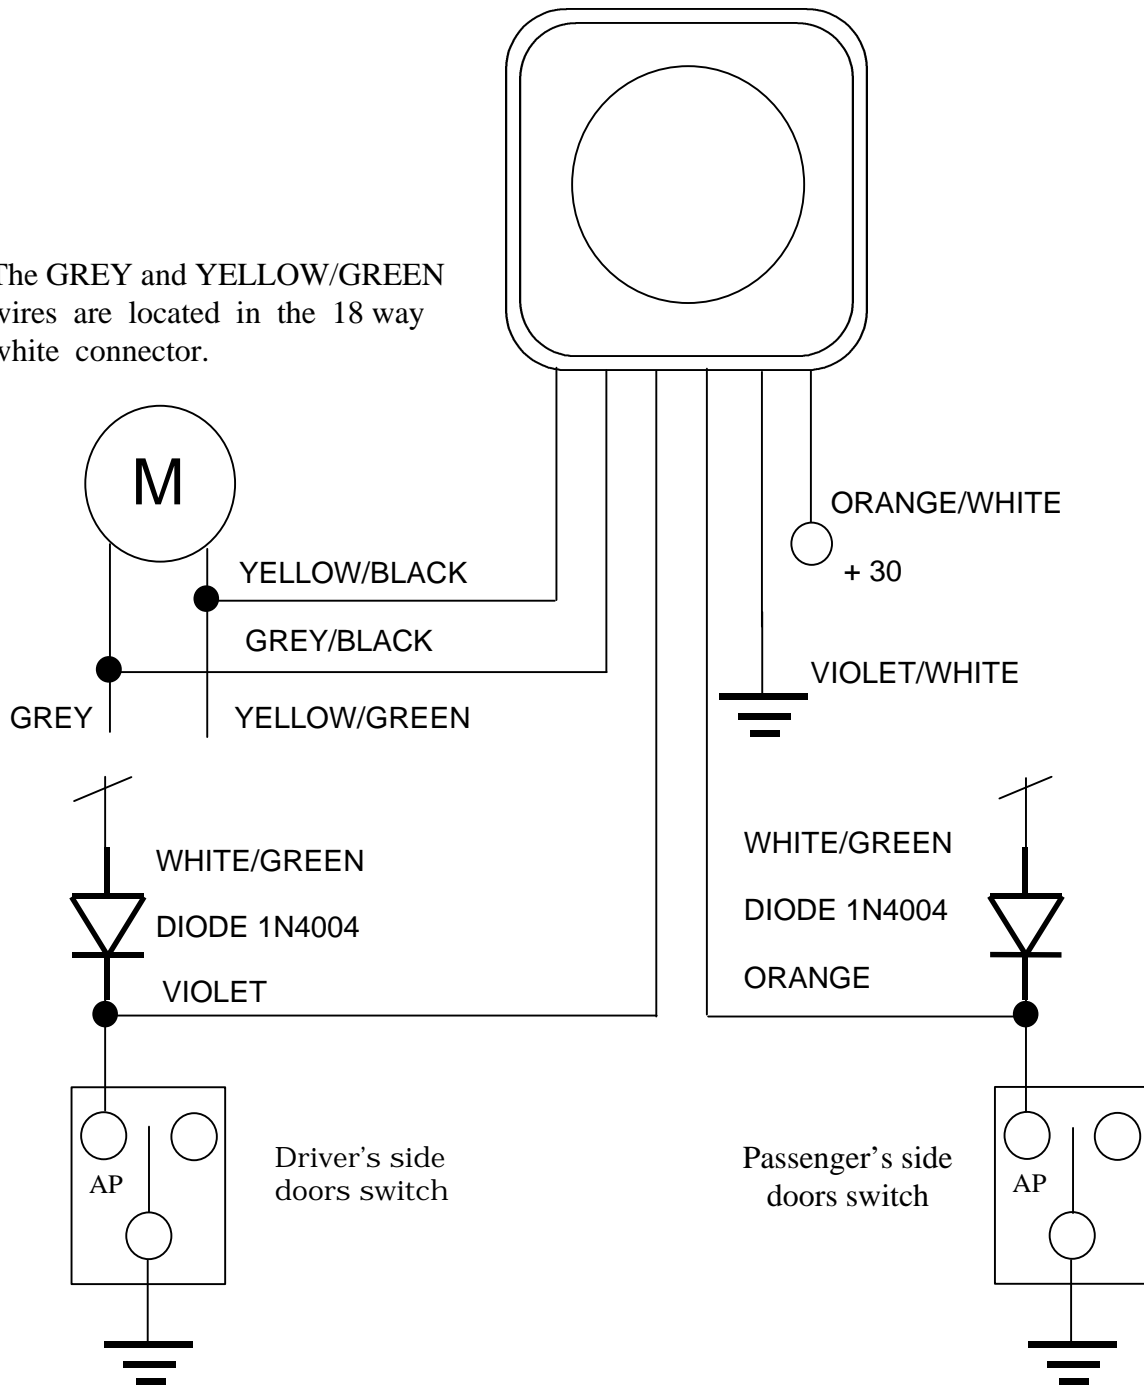

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.