



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MCC	MOD.	SMART	YEAR	99 →	PETROL	<input type="checkbox"/>	DIESEL	<input checked="" type="checkbox"/>
<b>ALARM/SIREN POSITION</b>									
<b>POWER SUPPLY</b>									
<b>IGNITION WIRE</b>									
<b>DIRECTION INDICATORS</b>									
<b>ELECTRIC WINDOWS</b>									
<b>CENTRAL DOORS LOCKING</b>									
<b>IMMOBILISATION POINT 1</b>									
<b>IMMOBILISATION POINT 2</b>									
<b>STARTER</b>									
<b>BONNET SWITCH</b>									
<b>DOORS AND BOOT SWITCH</b>									



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°127

Diagram to make the central locking on  
**MCC SMART**  
(for serie Bridge antithefts)

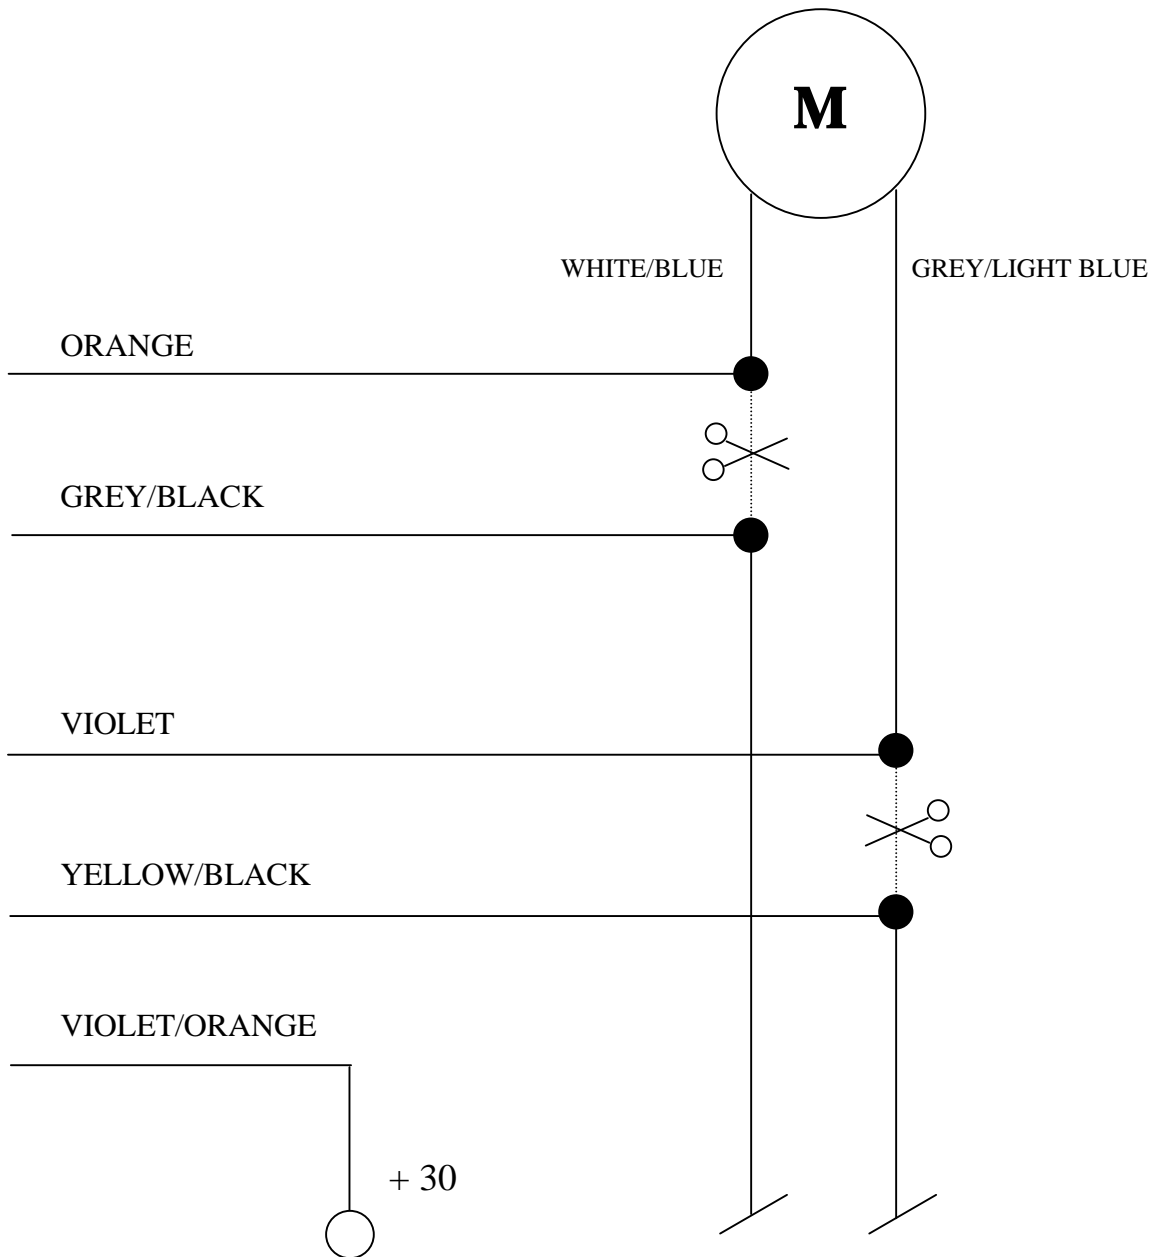



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°127A

Diagram to make the central locking on  
**MCC SMART**  
(for serie 3100 antithefts)

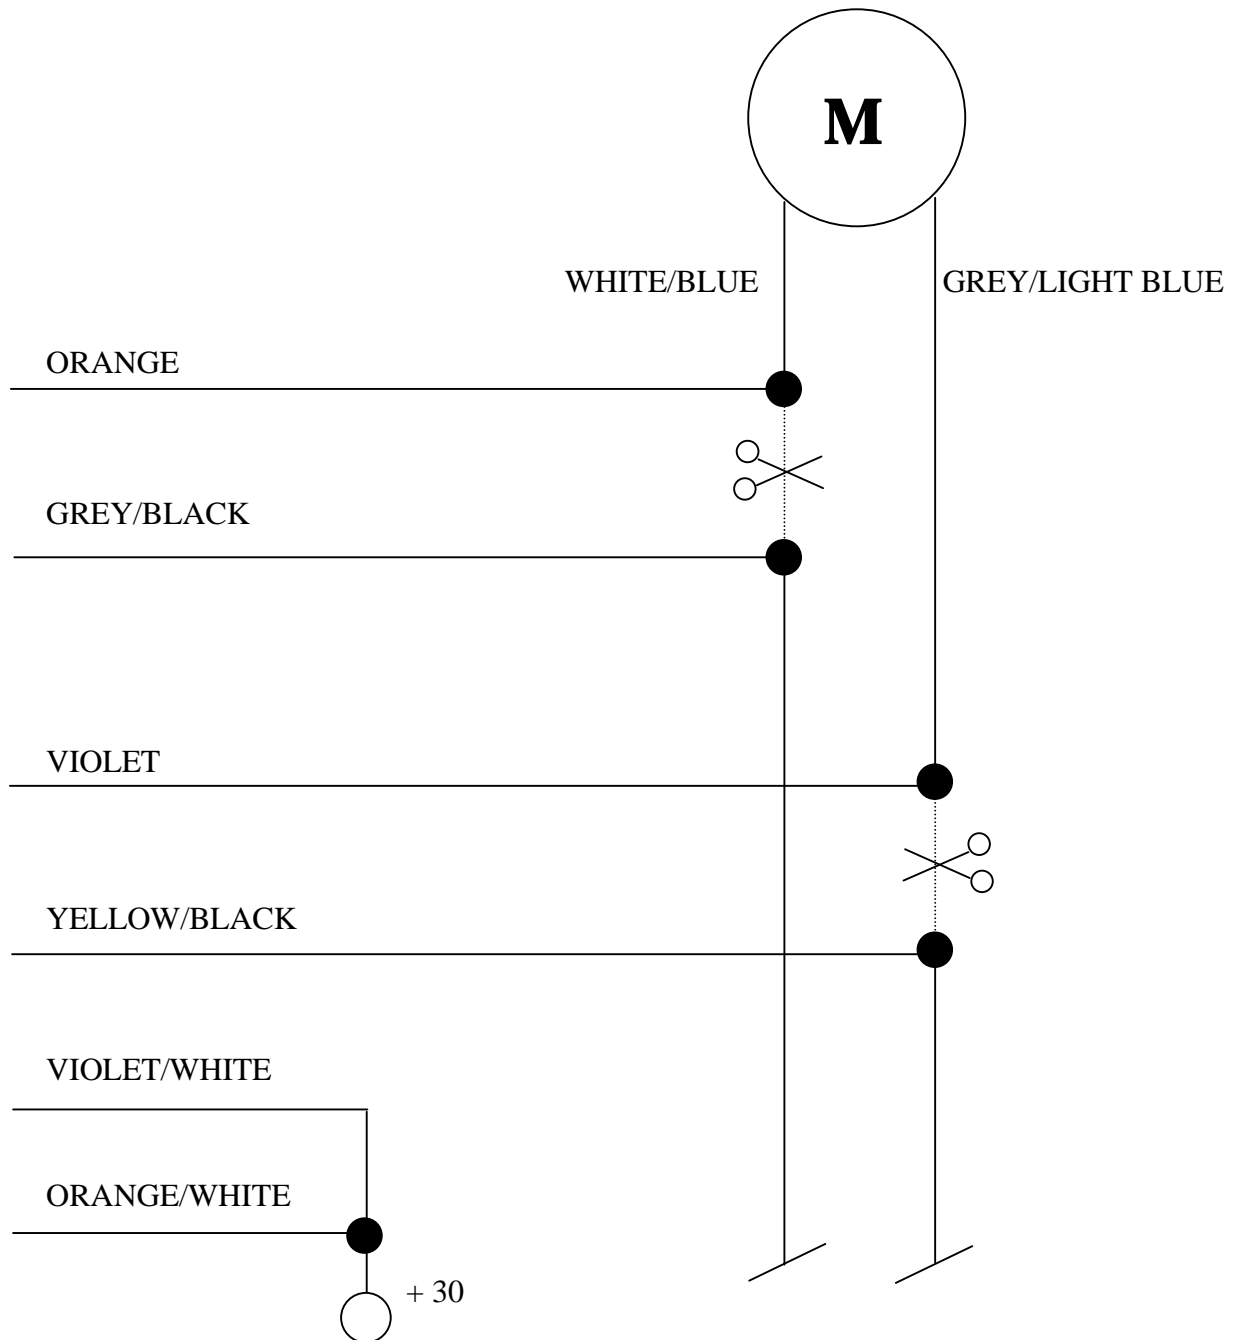

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

mcsma99gbd.doc