



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

MERCEDES

MOD.

V CLASS

YEAR

99 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment behind the support of the shock absorber, passenger's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the left side of the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 4 mm² RED wire located at the entrance of the fuse box.
- 31: connect to the 3 mm² BLACK wire coming out of the general power supply behind the bulkhead, driver's side.

IGNITION WIRE

+ 15/54: connect to the wire located at the position marked "+15" in the wiring harness coming out of the ignition switch.

DIRECTION INDICATORS

Connect to the BLACK/WHITE wire located at the position nr.15 and BLACK/GREEN wire located at the position nr.17 of the 18 way black connector behind the fuse box.

ELECTRIC WINDOWS

Not foreseen as original equipment.

CENTRAL DOORS LOCKING

Additional motor

Cut the BLUE/RED wire located at the position nr.4 (lock) and WHITE/RED wire at the position nr.3 (unlock) in the 18 way black connector marked ST1 and coming out of the central doors locking unit behind the gloves box, passenger's side. Refer to the **diagram nr. 128** for Bridge serie antithefts or to the **diagram nr.128A** for 3100 serie antithefts.

IMMOBILISATION POINT

Fuel pump

The vehicle has the serial immobilizer controlled by the transponder.

STARTER

+ 50: Cut the wire located at the position marked "+50" coming out of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the rubber trim of the bonnet.

DOORS AND BOOT SWITCH

To protect the front doors connect to the BROWN/WHITE wire located in the connector coming out of the serial switch, driver's side. To protect the rear doors connect to the BROWN/BLUE/WHITE wire at the position nr.18 in the 18 way black connector wound in the connectors cover located under the left side of the dashboard, driver's side.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°128

Diagram to make the lock and unlock of the doors on
MERCEDES V CLASS
(for serie Bridge antithefts)

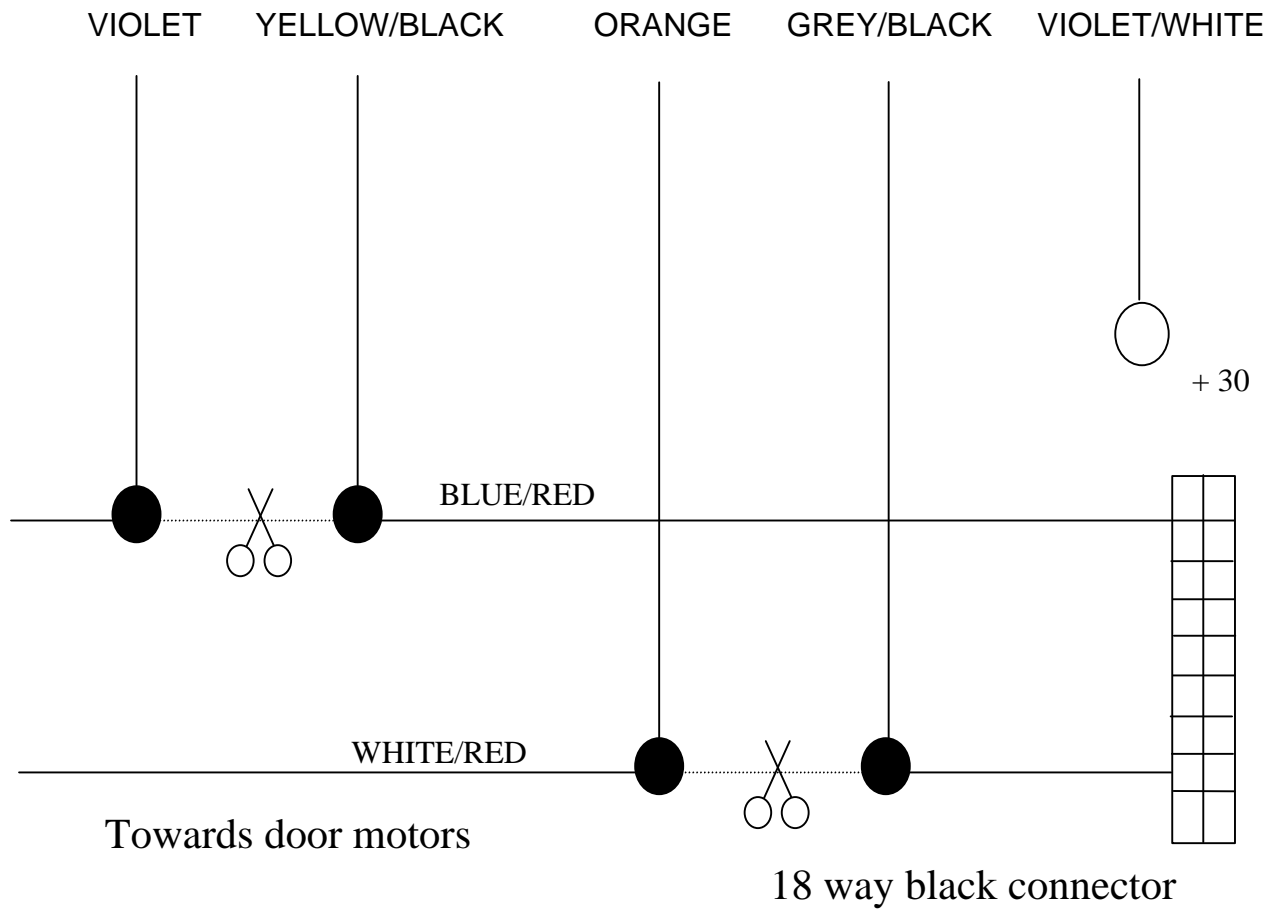



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°128A

Diagram to make the lock and unlock of the doors on
MERCEDES V CLASS
(for serie 3100 antithefts)

