



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MITSUBISHI** MOD. **PAJERO DI-D** YEAR. **01** → PETROL
DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the support of the passenger's side shock absorber. Pass the cables through the original core hitch located in the bulkhead that divides the engine compartment and the passenger's compartment, passenger's side.
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned on the left of the dashboard, driver's side.
POWER SUPPLY	+30: connect to the 4 mm ² RED wire located in a multiway connector, in the fuse box. -31: connect with a terminal cable directly to the car body.
IGNITION WIRE	+15/54: Connect to the BLACK/WHITE wire with SILVER reference located in the wiring harness placed on the left, along the steering column.
DIRECTION INDICATORS	Connect to the GREEN/RED wire at the position nr.9 and to the GREEN/YELLOW wire with SILVER reference at the position nr.7 located in the 15 way white connector, in the lower part of the fuse box placed under the driver's side dashboard.
ELECTRIC WINDOWS	BUS controls The signals to make the module connection are not available.
CENTRAL DOORS LOCKING	Negative control signal Connect to the LIGHT GREEN/BLACK wire (lock) and to the BROWN/BLACK wire (unlock) located in the 32 way white connector placed on the left of the fuse box, under the driver's side dashboard. For the Bridge serie antithefts make reference to the diagram nr.73 and for the 3100 serie antithefts make reference to the diagram nr.73A .
IMMOBILISATION POINT	Gasoil pump Cut the GREEN/BLACK wire with SILVER reference located in the wiring harness coming out of the relay marked "D", placed in the relay holder (the little one) on the side of the battery.
STARTER	+50: Cut the BLACK/YELLOW wire located in the wiring harness coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, near the original rubber bonnet bumper.
DOORS AND BOOT SWITCH	Connect to the RED/GREEN wire with SILVER reference located at the position nr.13 of the 15 way white connector, placed in the lower part of the fuse box, under the driver's side dashboard.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°73

Diagram to make the central doors locking on
MITSUBISHI PAJERO DI-D mod. 2001
(For Bridge antithefts)

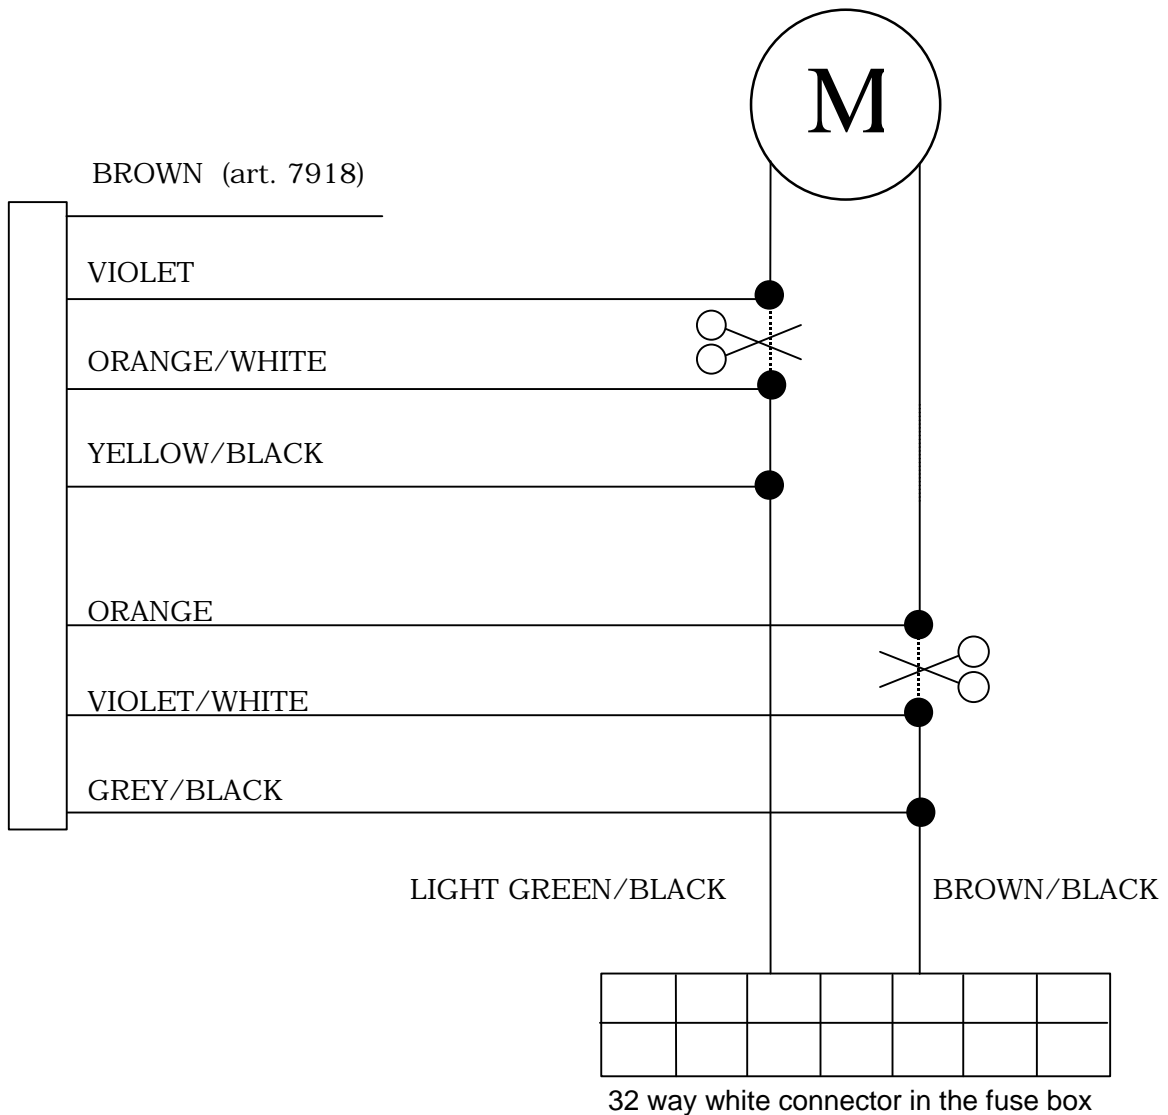

Note: To follow this diagram it is suggested to use antithefts with 6 wires of the central doors locking unit. In the case of Bridge installation it is necessary to use the universal module art. 1044 following the wires colours as described in the diagram.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°73A

Diagram to make the central doors locking on
MITSUBISHI PAJERO DI-D mod. 2001
(For 3100 serie antithefts)

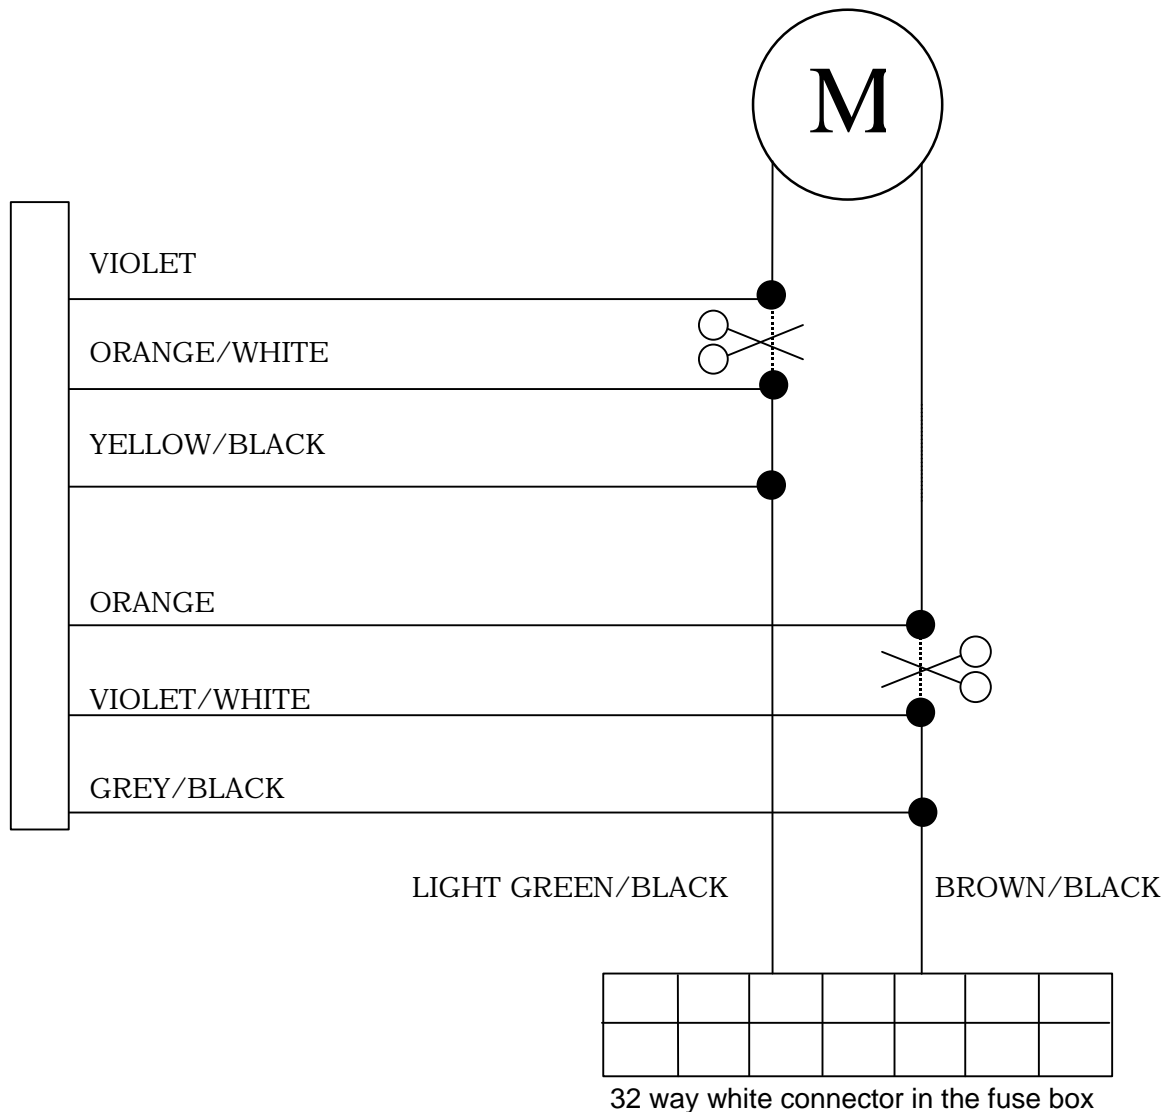

Note: To follow this diagram it is suggested to use antithefts with 6 wires of the central doors locking unit. In the case of Bridge installation it is necessary to use the universal module art. 1044 following the wires colours as described in the diagram.