



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

NISSAN

MOD.

TERRANO

YEAR

02 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the bulkhead of the driver's side shock absorber or, as alternative, between the shock absorber and the bulkhead that divides the passenger's compartment.

POWER SUPPLY

+ **30**: connect the 5 mm² WHITE wire located in the wiring harness coming out of the multiway black connector placed in the fuse box.
- **31**: connect with a cable terminal to one of the ground cable terminals located behind the left lateral bulkhead, driver's side.

IGNITION WIRE

+ **15/54**: connect to the wire "accessories" located in the wiring harness coming out of the connector of the ignition key.

DIRECTION INDICATORS

Connect to the 0,5 mm² GREEN/YELLOW and GREEN/BLACK wires located in the wiring harness coming out of the 16 way connector placed behind the left lateral bulkhead, driver's side or, as alternative, in the wiring harness located on the coming out of the direction indicators switch.

CENTRAL DOORS LOCKING

Negative controls

Cut the GREEN/RED wire located in the wiring harness coming out of the central locking unit placed behind the right lateral bulkhead, driver's side. Refer to the **diagram nr.137** for the 7900 serie antithefts. Refer to the **diagram nr. 137A** for the 3100 and 3900 serie antithefts.

IMMOBILISATION POINT

Central immobilisation

Cut the 1 mm² RED/SILVER wire located on the coming out of a multiway connector placed in the fuse box.

STARTER

+**50**: Cut the 2 mm² wire located in the wiring harness coming out of the ignition key placed at the position marked "+50".

BONNET SWITCH

Install an additional switch on the headlamp support plate en correspondance with the driver's side light.

DOORS SWITCH

Connect to the RED/BLACK wire for the passenger's side door and to the 1 mm² RED/BLACK wire for the driver's side door located in the wiring harness coming out of the 16 way connector placed behind the left lateral bulkhead, driver's side.

BOOT SWITCH

Connect to the 1 mm² WHITE/RED wire located in the same connector where are located the doors connections.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°137

Diagram to make the central locking on
NISSAN TERRANO year 2002
(for 7900 serie antithefts)

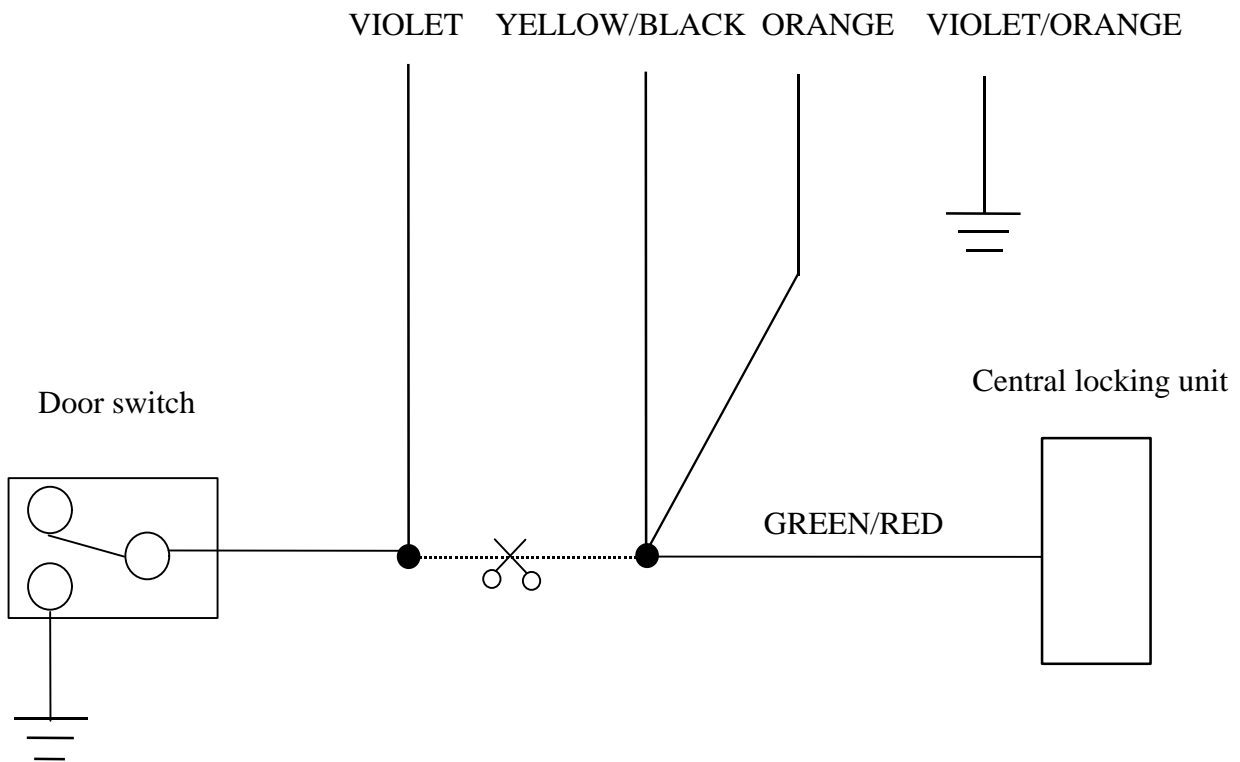

The above mentioned wire is located in the wiring harness of the 8 way connector coming out of the driver's side door, as alternative directly on the coming out of the central locking unit.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°137A

Diagram to make the central locking on
NISSAN TERRANO year 2002
(for 3100 and 3900 series antithefts)

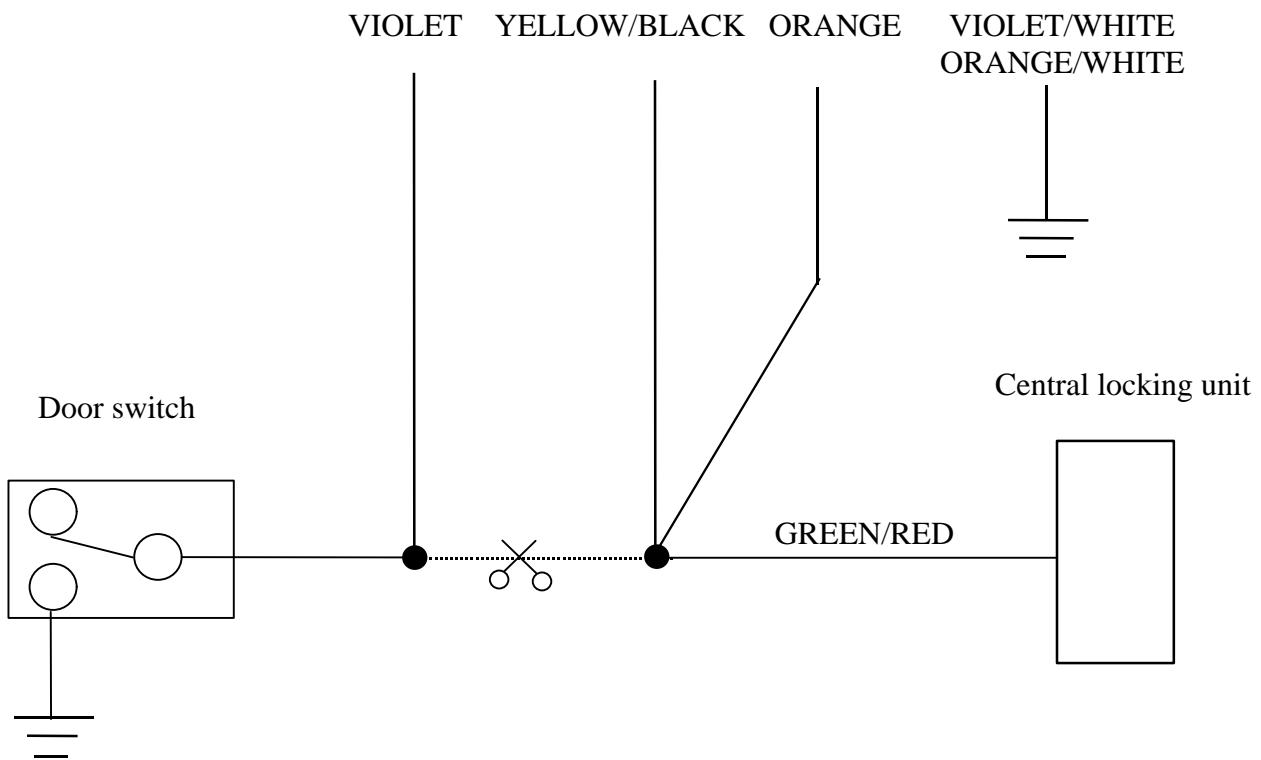

The above mentioned wire is located in the wiring harness of the 8 way connector coming out of the driver's side door, as alternative directly on the coming out of the central locking unit.